AVENTOS HK



Wood/wide aluminum hardware set

Lift mechanism set



- Lift mechanism (qty 2)
- #7 x 35 mm (1-3/8") wood screw (qty 10)

Power factor	Opening angle	Part no.
43 — 99	107°	20K2300.N5
100 — 174	107°	20K2500.N5
175 — 349	107°	20K2700.N5
350 — 792	100°	20K2900.N5

Cover set



- Right and left cover plate
- Non-handed cover cap (qty 2)

Part no.

Cover set

20K8000.NA

Wood or wide alum door hardware set

Arm assembly mounting plate (qty 2)



Hardware set	20\$4200
Inst. screw for wood doors	606N or 606P
Inst. screw for wide alum doors	7072A

Mounting plate with bracket set

- Left and right mounting plate with bracket
- For large overlay five-piece doors



Part no.

Mounting plate w/ bracket set

20S4F01







Risk of injury from spring-loaded arm

- Do not push arm assembly down or leave in the down position
- Remove mechanism before installing or removing cabinet

1 Locating pin locations and minimum depth

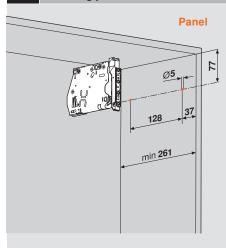

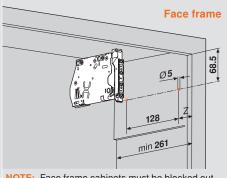

NOTE: Face frame cabinets must be blocked out flush with the frame.

Overlay	up to 28	32	35
Z	37	35	33


Part no.


Universal individual template is available for pre-boring locating pins

65.1051.02


2 Attaching the lift mechanism

Align the lift mechanism in the cabinet using the 5 mm locator pins and attach the mechanism with the three wood screws provided.

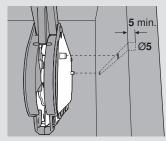

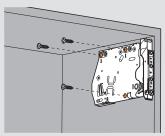



#7 x 35 mm (1-3/8") wood screws (qty 3)

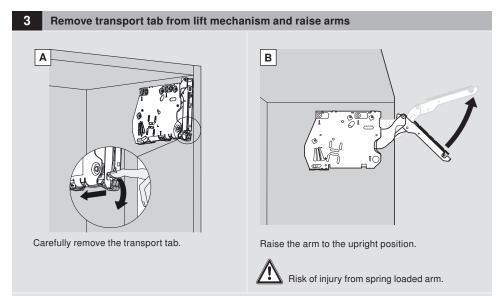

NOTE: Do not remove transport tab until just before attaching the door


Attaching the mounting plates

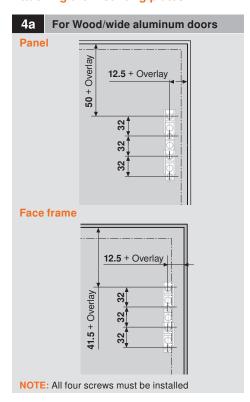

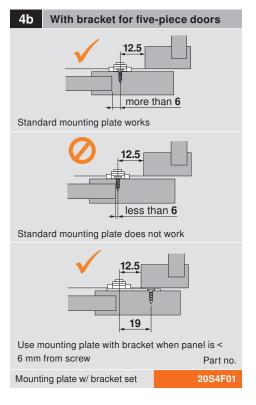


5 Attaching the door

Attach the door using the CLIP mechanism in the mounting plate.

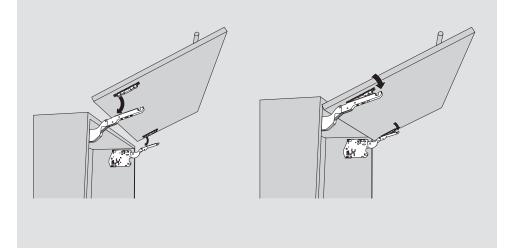

6 Adjust the door tension


Use a screw gun and #2 x 2 POZI driver bit to adjust the lift mechanism to the desired tension.

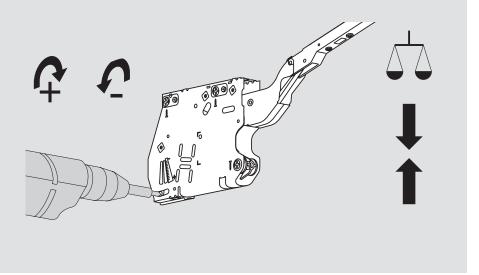

7


Finalize the door adjustments

Use a POZI screwdriver to adjust cam adjustments for each of the three-dimensional adjustments.

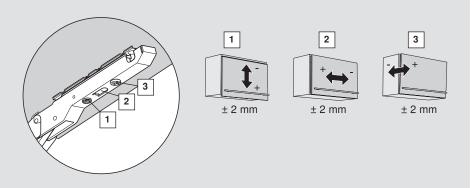

8 Attach cover caps

Snap the symmetrical cover caps on each cover plate. Place the left and right cover plates over the appropriate lift mechanisms and snap them in place.

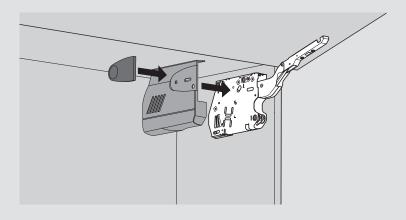




△WARNING

Risk of injury from spring-loaded arm

- Do not push arm assembly down or leave in the down position
- Remove mechanism before installing or removing cabinet


1 Removing the covers


Remove the cover caps and cover plate.

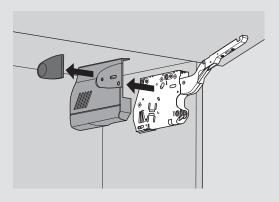


2 Removing the door

- Open the door. Use a screwdriver to disengage the CLIP mechanism of the lever arm from the mounting plate
- Support the door with one hand and repeat on the other side

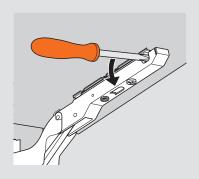

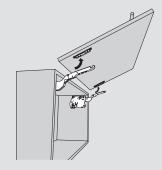

Other information

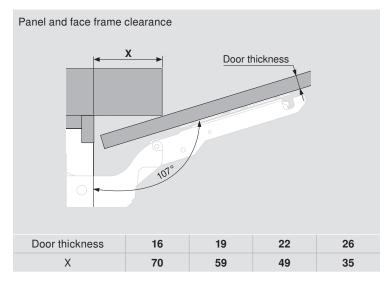

Inch		mm
1/32	.031	
1/16	.063	1.5
3/32	.094	2
1/8	.125	3
5/32	.156	4
3/16	.188	5
7/32	.219	5.5
1/4	.25	6
9/32	.281	7
5/16	.313	8
11/32	.344	9
3/8	.375	9.5
13/32	.406	10
7/16	.438	11
15/32	.469	12
1/2	.5	13
17/32	.531	13.5
9/16	.563	14
19/32	.594	15
5/8	.625	16
21/32	.656	17
11/16	.688	17.5
23/32	.719	18
3/4	.75	19
25/32	.781	20
13/16	.813	20.5
27/32	.844	21
7/8	.875	22
29/32	.906	23
15/16	.938	24
31/32	.969	24.5
1	1	25.4

Blum, Inc. 800-438-6788 sales.us@blum.com blum.com