



Weight Capacity is 25lbs.  
(Note: Must install into stud or use drywall anchor.)

1

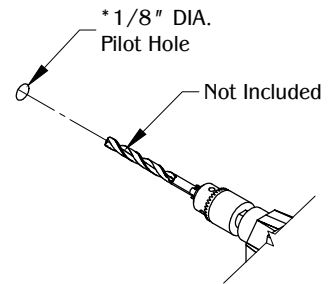


Determine the position and location of the part on the work surface. Make a pilot hole. (\* Note: Recommended to install into stud. Use a 7/32 inch DIA. pilot hole for drywall installation.)

2

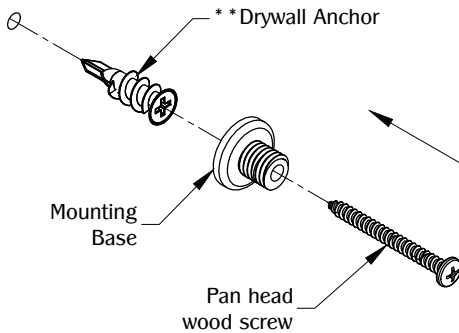





Install the base with the pan-head wood screw. (\*\* Note: Use the anchor for drywall installation ONLY.)

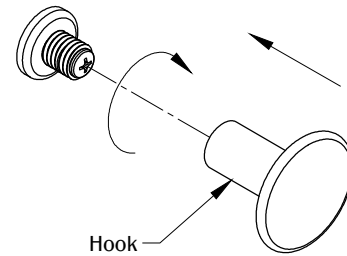3



Hand-tighten the hook and secure it to the base.

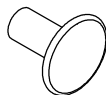TABLE OF CONTENTS:

	.....1 X CH23 Hook
	.....1 X CH23 Base
	.....1 X HK-Anchor
	.....1 X CH23-Screw (No.8 1-3/4" Pan-Head wood screw)