




Installation Instructions

1. Drill 9/32" hole in floor at proper location to accept plastic moly (rawlplug).
2. Press fit plastic moly (rawlplug) into prep hole.
3. Remove threaded decorative cap by unscrewing from Doorstop.
4. Position black rubber Doorstop and decorative ring over prep hole.
5. Insert M5 hex head bolt into cavity of Doorstop and into the plastic moly (rawlplug).
6. Use 5mm Hex Head Allen Wrench to tighten mounting bolt.
7. Re-install threaded decorative cap by screwing into threads of Doorstop.

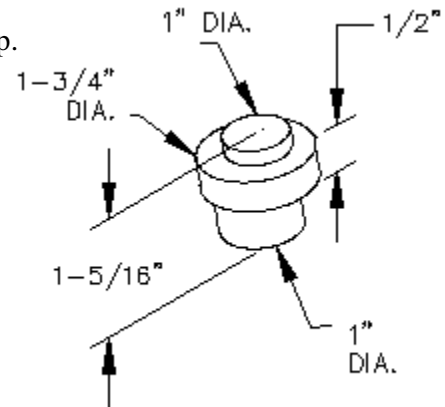

3881

- Aluminum ●
- Stainless Steel ●
- Brass ●

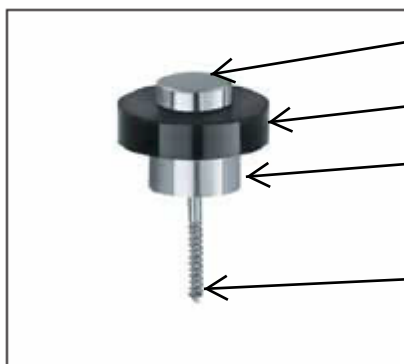

decorative cap

rubber Doorstop

decorative ring

mounting bolt