

PART #

EDP3

310.318.2491 • 800.523.1269 • www.mockett.com

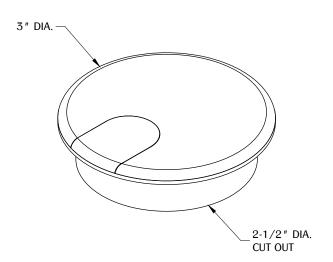


1

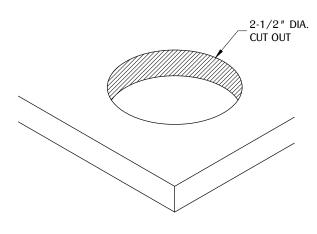


Make a cut out on the desired surface. (<u>Note</u>: We do not recommend cutting before receiving part or part sample.)

2

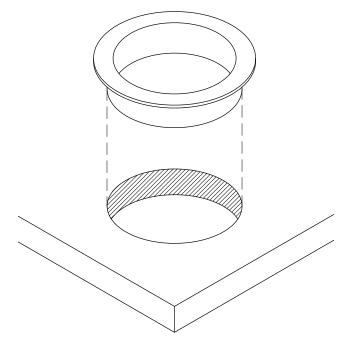

3

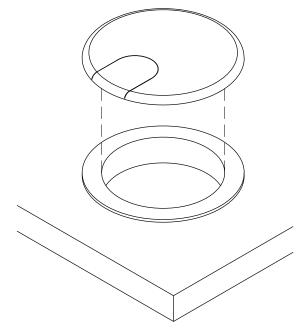


Install EDP1 into the cut out and be sure it is fully leveled onto worksurface.

Insert EDP2 into the liner.

TABLE OF CONTENTS:



. 1x EDP1



1x FDP2