
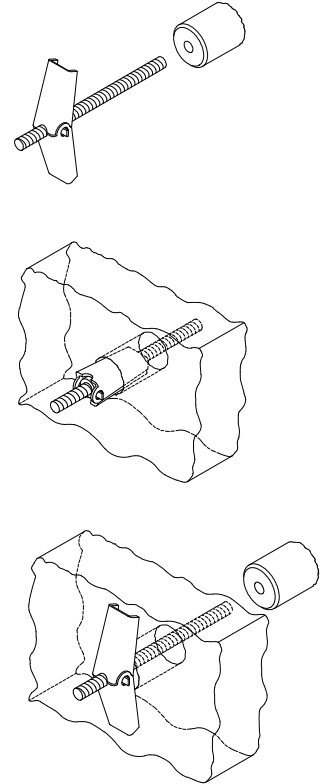


Toggle Bolt Wings & Anchors

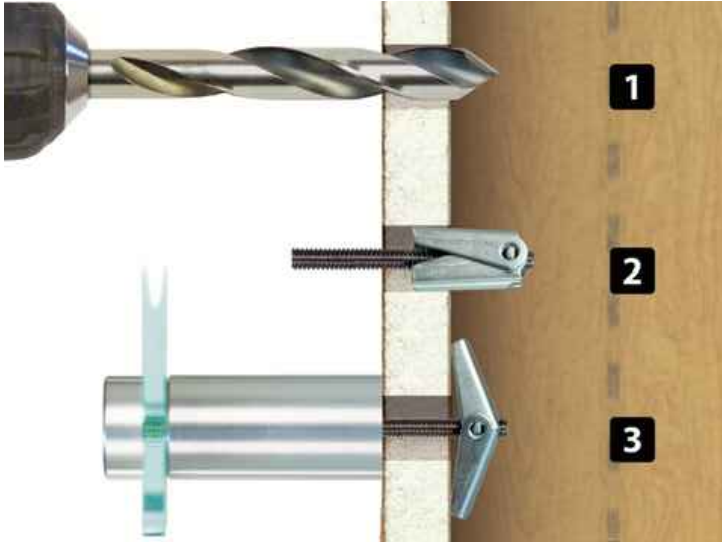


Step 1: Drill a hole in to the wall board or hollow mounting surface.
This will allow the toggle bolt wings to pass through the surface.
(Note: Recommend hole sizes.
MPB-HD-TWA1 = 7/8" DIA.
MPB-HD-TWA2 = 1/2" DIA.)

Step 2: Thread the wing onto the appropriate threaded hardware and place the wing end into the pre-drilled hole in the wall surface. DO NOT let go of the threaded end as it will fall behind wall surface.

Tip: If you can install the thread hardware of the toggle assembly into a part (see diagram #3), it can be used as a tool to secure and tighten for installation. Once the wing has opened up behind the wall surface, pull it towards you as you tighten so the wing is in contact with the inside of the wall surface to stop it's rotation.

Step 3: Attach the MPB parts needed for your application. (Note: If necessary, use adapter on applicable MPB parts.)

MPB-HD-TWA1 TABLE OF CONTENTS:

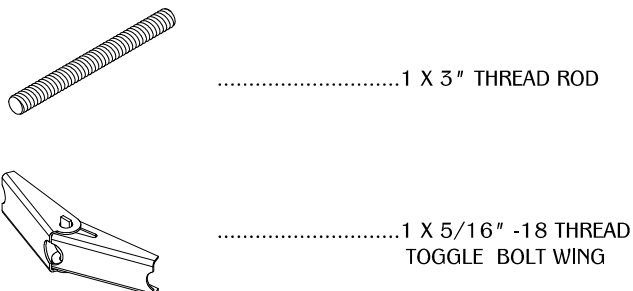

MPB-HD-TWA2 TABLE OF CONTENTS:

