

OVERVIEW

- Due to the smoothness and lack of flat spots, minimal framework is required.
- For this example, we made a dado cut through the backside of panel.

PRO TIP:


Econokore's face may be covered using a wide variety of materials including laminates, veneers, metals, leathers, and similar semi rigid materials.

For an indepth guide to Econokore lamination, check out our Video Tutorial:




Let's get started!

1.

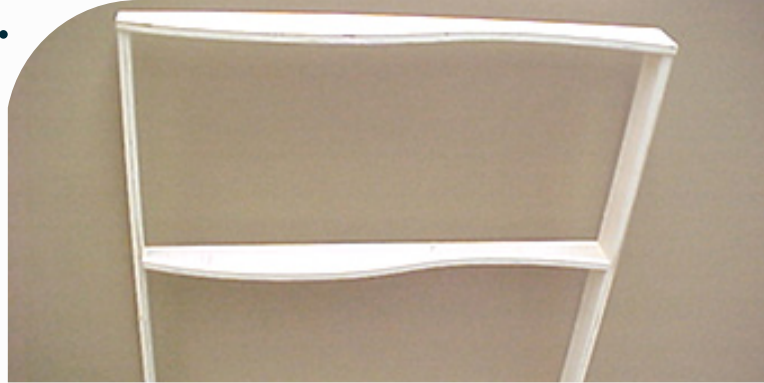


Construct the framework. Horizontal ribbing is preferred.

2.

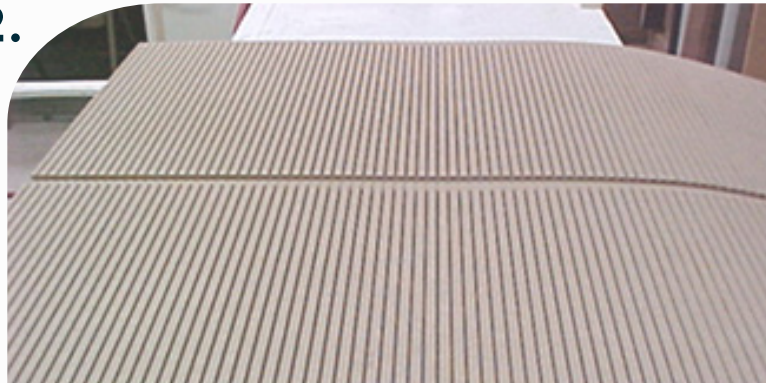

Machine necessary cuts on backside of panel.


3.

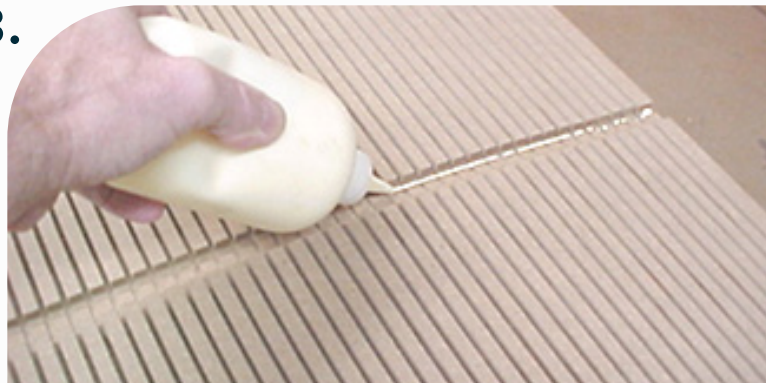

Apply PVA/Wood glue on areas that will be attached to framework.



Attach Econokore panel to framework.

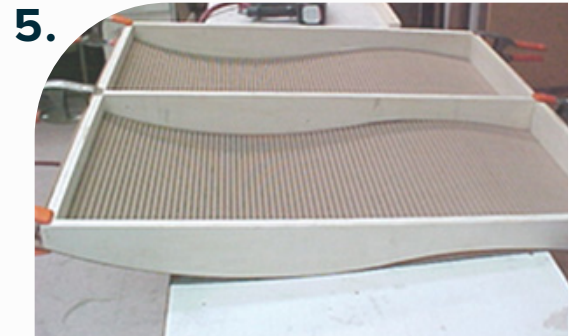

Hold in place using clamps or other preferred methods.



Staples can be applied along framework for extra reinforcement.



Front View.



Back View.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT ECONOKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[ECONOKORE SPEC SHEET](#)