

OVERVIEW

- All vertical ribs should be set slightly back from the horizontal ribs so they will not interfere in material forming.
- Only attach to flush vertical rib when forming a seam.

PRO TIP:

Always attach to framework using horizontal support ribs. Use three ribs (top, middle, & bottom).

To learn how to laminate the Flexboard panel, check out our video:




Let's get started!

1.



Use a blade to remove the necessary core ribs to allow a tight inset attachment to framework spacing.

2.

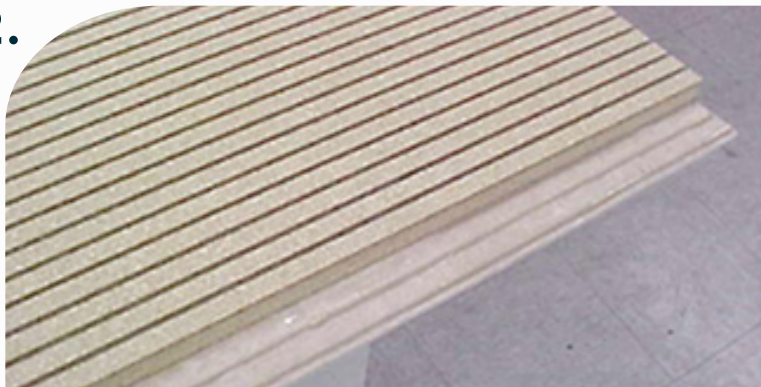


Panel is ready for inset attachment. (Optional: Dado)

3.




Apply glue to horizontal ribs.

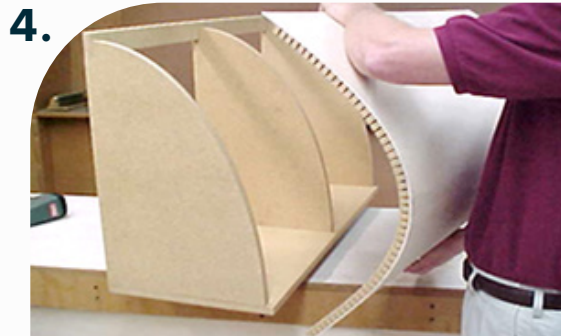

Position the panel.



Press pre-sized and pre-cut panel to framework.

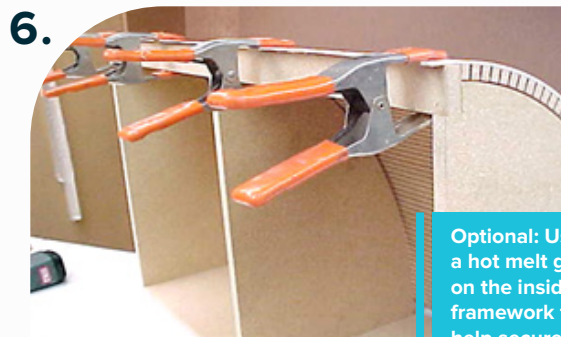

Optional: Use a hot melt glue on the inside framework to help secure material.

Staple and clamp ends to secure attachment between panel and framework.



Staples can be used on the outside face along ribbing. Face is now ready for lamination.

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT FLEXBOARD](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[FLEXBOARD SPEC SHEET](#)