


# Accessories and Assembly Aids

## Dynapro

### Drilling Template for Drawer

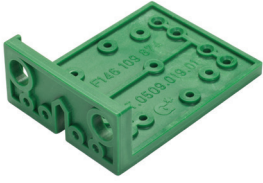

- For front locking device
- For drawer hole hook
- For adjustment adapter

Description	Item No.	PU
Drilling template	<b>F146109874299</b>	1

### Centering Drill Bit Ø 2.5mm



The GRASS centering drill bit is used for pre-drilling countersink wood screws, Ø 2.5mm

Description	Item No.	PU
Centering drill bit	35692-01	1

### Inset Bracket Set




- For face frame inset applications with Dynapro
- Works with all inset applications
- Bracket mounts behind the face frame, minimum 12.7mm (1/2") frame offset required
- Slide attaches easily with one screw
- Includes guide markings for proper setback
- Polybagged with brackets, screws, instructions



#### Polybag set consists of:

- 2 - Universal Inset Bracket ABS Brown
- 2 - 8 X 32 Tapped Insert for Inset bracket
- 4 - #7 X 2" mounting screws
- 2 - #8 - 32 X 1/2" Machine Screw FHP

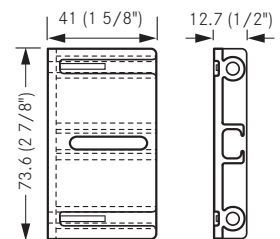

PU - Packaging unit

## Screws

### Euro Screw, Nickel-plated



Description	Item No.	PU
Euro Screw 11mm (7/16") Pozi	499.360.61.1015	500
Euro Screw 13mm (1/2") Pozi	499.360.61.3015	500

### Wood Screw, Nickel-plated



Description	Item No.	PU
#6 x 5/8" FHP, NI	81001-43	500
#6 x 3/4" FHP, NI	81003-43	500

## Bumper Pads

### AIRSOFT Bumper Pads, Plastic, Round



Description	Item No.	PU
AirSoft Bumper pad, 2.5mm, clear	63480-99	480
AirSoft Bumper pad, 2.5mm, clear	63482-30	5000
AirSoft Bumper pad, 5mm, clear	63481-43	500
AirSoft Bumper pad, 5mm, clear	63483-30	5000

### Self-adhesive Bumper Pads




Description	Item No.	PU
Self-adhesive bumper pad, clear, 7mm	630.000.03.0750	1088
Self-adhesive bumper pad, clear, 10mm	630.000.03.1050	1050
Self-adhesive bumper pad, clear, 12mm	630.000.02.1250	5000

### Bumper Pads



Description	Item No.	PU
Bumper pad, round, clear, 3mm	31002-43	500
Bumper pad, round, clear, 1.5mm	31004-43	500

### Bumper Pads



Description	Item No.	PU
Bumper pad, hexagonal, butterscotch, 3mm	00464-43	500