

OVERVIEW

- There are many methods for attaching Kerfkore to framework:
 - Rabbet
 - Uncut
 - Side Cut
 - Top Butt
 - Side Butt
- Keep in mind that Kerfkore is laminated first and then attached to framework.

Let's get started!

RABBET ATTACHMENT

- Make a 1-1/2" X 96" strip of 1/4" Kerfkore and cover with a vertical grade laminate.
- Use this as a measuring tape.
- Can also use 1/2" or 3/4" Kerfkore and cut a 1/4" rabbet joint into one edge of it.

NOTE: Make sure the panel rabbet joints are the same thickness as the rabbet joint in the measuring tape area.

Because Kerfkore is attached after lamination, an allowance must be made for the offset. There must be enough space built in to permit the depth of the rabbet joint to recess into the top and bottom or side pieces.




PRO TIP:

Kerfkore can be attached using a PVA glue and pins. Use a hot melt glue to help secure the parts until the PVA glue can cure.

Check out our **FAQs** for more informaton about Kerfkore:



UNCUT ATTACHMENT

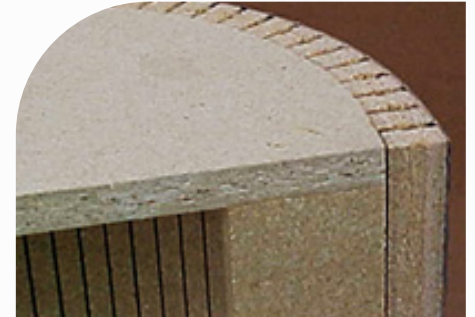


SIDE CUT ATTACHMENT



TOP BUTT ATTACHMENT

When measuring, use a cloth measuring tape or non-stretching string to wrap around perimeter.



Because Kerfkore is attached after lamination, an allowance must be made for the offset. There must be enough space built in to permit the depth of the Butt joint to recess into the top and bottom or side pieces.

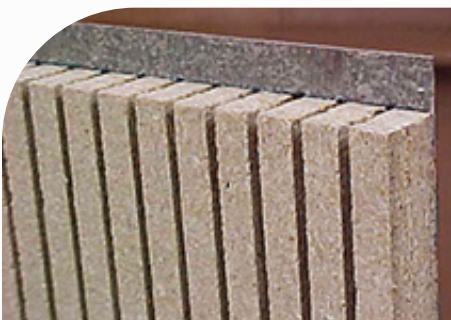

SIDE BUTT ATTACHMENT

When measuring, use a cloth measuring tape or non-stretching string to wrap around perimeter.

Because Kerfkore is attached after lamination, an allowance must be made for the offset. There must be enough space built in to permit the depth of the Butt joint to recess into the top and bottom or side pieces.

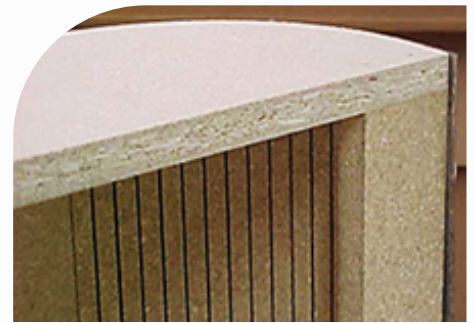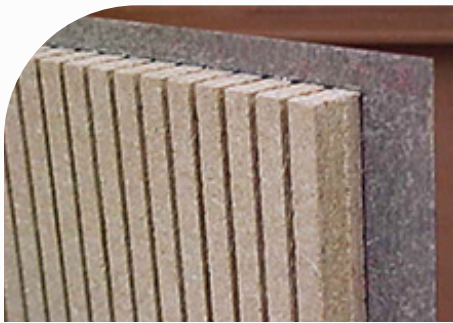

Congratulations! Your project is complete, but this is just the beginning of opportunities with our Kerfkore products.

[LEARN ABOUT KERFKORE](#)

[DO'S & DON'TS](#)

[REQUEST A SAMPLE](#)

[KERFKORE SPEC SHEET](#)