


**PART# 402/1H**

**Bar Mount Bracket for 1-1/2" Diameter Tubing**

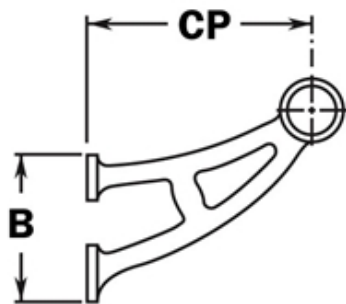

<b>CP</b>	6-1/16"
<b>B</b>	3-7/8"

**MATERIAL & AVAILABLE FINISHES**

	<b>BRASS</b>	<b>304 SST</b>	<b>316 SST</b>
<b>Polished</b>	√	√	
<b>Satin</b>	√	√	
<b>Clear Coat</b>	√		

**MATERIAL USAGE**

	<b>BRASS</b>	<b>304 SST</b>	<b>316 SST</b>
<b>Indoor</b>	√	√	
<b>Outdoor</b>	√*		

\*Uncoated brass only

**MATERIAL CARE**

<b>Brass</b>	Use Lavi Metal Polish (Item# 00202) and apply with a damp, soft cloth.
<b>Stainless Steel</b>	Use metal cleaner and apply with a damp, soft cloth.

**INSTALLATION**

Drill hole for threaded rod into vertical of the bar. Thread rod through the bar into bracket and secure with washer and nut. Fasten bracket to the bar with three PFH screws and then fasten tube to bracket using the provided self drilling screw.

**HARDWARE INCLUDED**

3 x #12 x 1-1/2" PFH screws. 1 x #8 x 5/8" PFH self drilling screws. 1 x 5/16-18 x 3" threaded rod. 1x 5/16/18 hex nut. 1 x 5/16 flat washer.

**USE TOGETHER WITH**

1.5" OD tube (A110), matching flush fittings for 1.5" tube (730/1H series) and matching finials (600/1H, 602/1H, 604/1H).