


Hood Installation

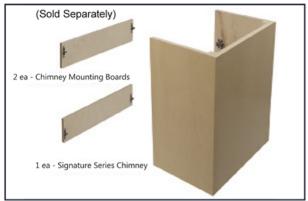


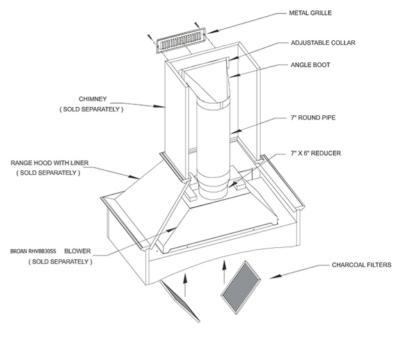




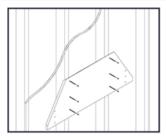


Step 1: Screw mounting plate to wall

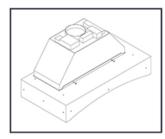


Step 2: Assemble blower unit (sold separately) to metal liner

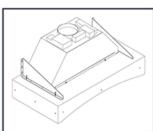


Step 3: Fasten metal mounting brackets to liner

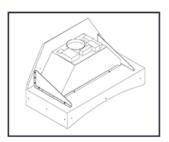


Step 4: Hang the liner/bracket assembly on the mounting plate (make all electrical and ventilation connections at this point)

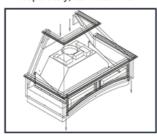


Step 5: Slip the wood range hood on top of the mounting plate

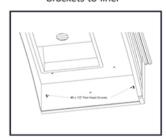

Step 6: Fasten wood range hood to liner with (4) screws

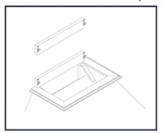

Step 7: If using a chimney (sold separately) mount blocks to wall

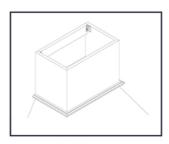

Step 8: Snap chimney in place



