



**Parts List**


**Recommended Tools**

- |                        |                                    |                       |
|------------------------|------------------------------------|-----------------------|
| (A) Handtruck Assembly | (G) Small Washer (M8)              | (M) Right Fin-Bracket |
| (B) Wheel Axle         | (H) Large Washer (M16)             | (N) Handle Assembly   |
| (C) Wheel              | (I) Cotter Pin (.125" D, 1.125" L) | (O) Left L-Bracket    |
| (D) Long U-bracket     | (J) Short Bolt (M8-1.25x45)        | (P) Right L-Bracket   |
| (E) Short U-bracket    | (K) Long Bolt (M8-1.25x55)         | (Q) Cushioned Handle  |
| (F) Locknut (M8)       | (L) Left Fin-bracket               |                       |

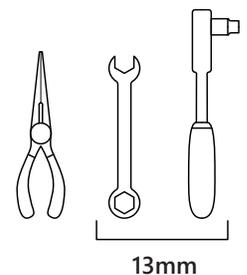


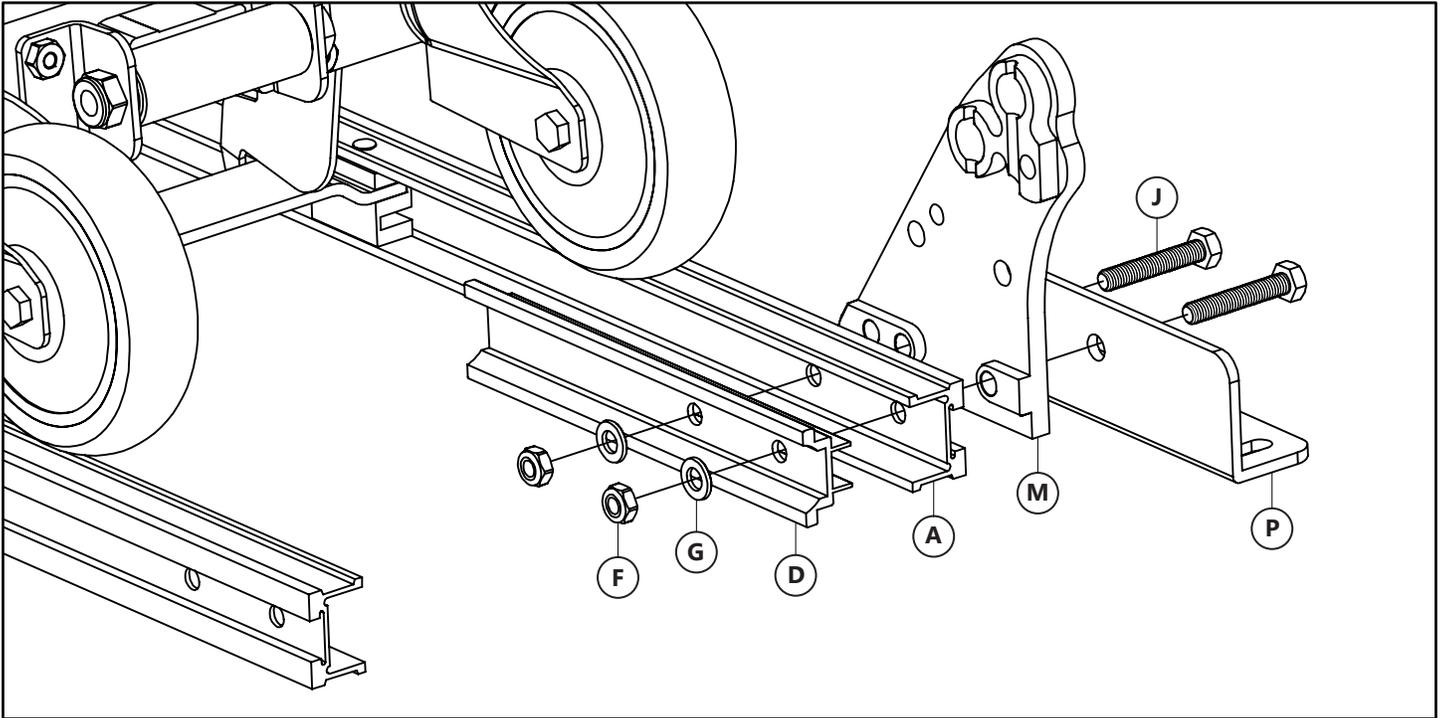


- Align the long U-bracket (D), right Fin-bracket (M), and right L-bracket (P) with the holes in the handtruck assembly (A) extrusion.
- Attach using two short bolts (J), two small washers (G), and two locknuts (F). Tighten using 13mm ratchet and wrench.

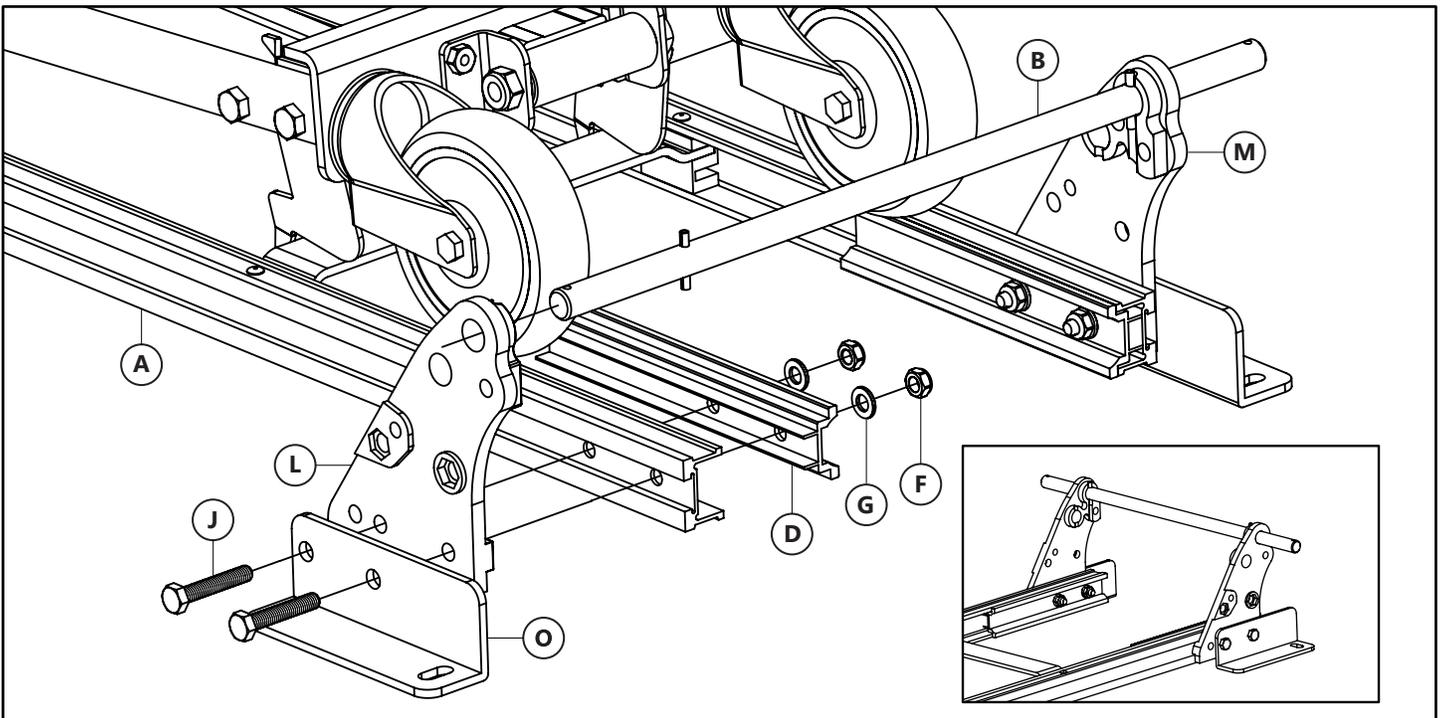


- Slide the wheel axle (B) through the top hole on the right Fin-bracket (M). Align the axle pin with the right Fin-bracket groove.
- Slide the wheel axle (B) through the top hole on the left Fin-bracket (L). Align the axle pin with the left Fin-bracket groove.
- Align the long U-bracket (D), left Fin-bracket (L), and left L-bracket (O) with the holes in the handtruck assembly (A) extrusion.
- Attach using two short bolts (J), two small washers (G), and two locknuts (F). Tighten using 13mm ratchet and wrench.

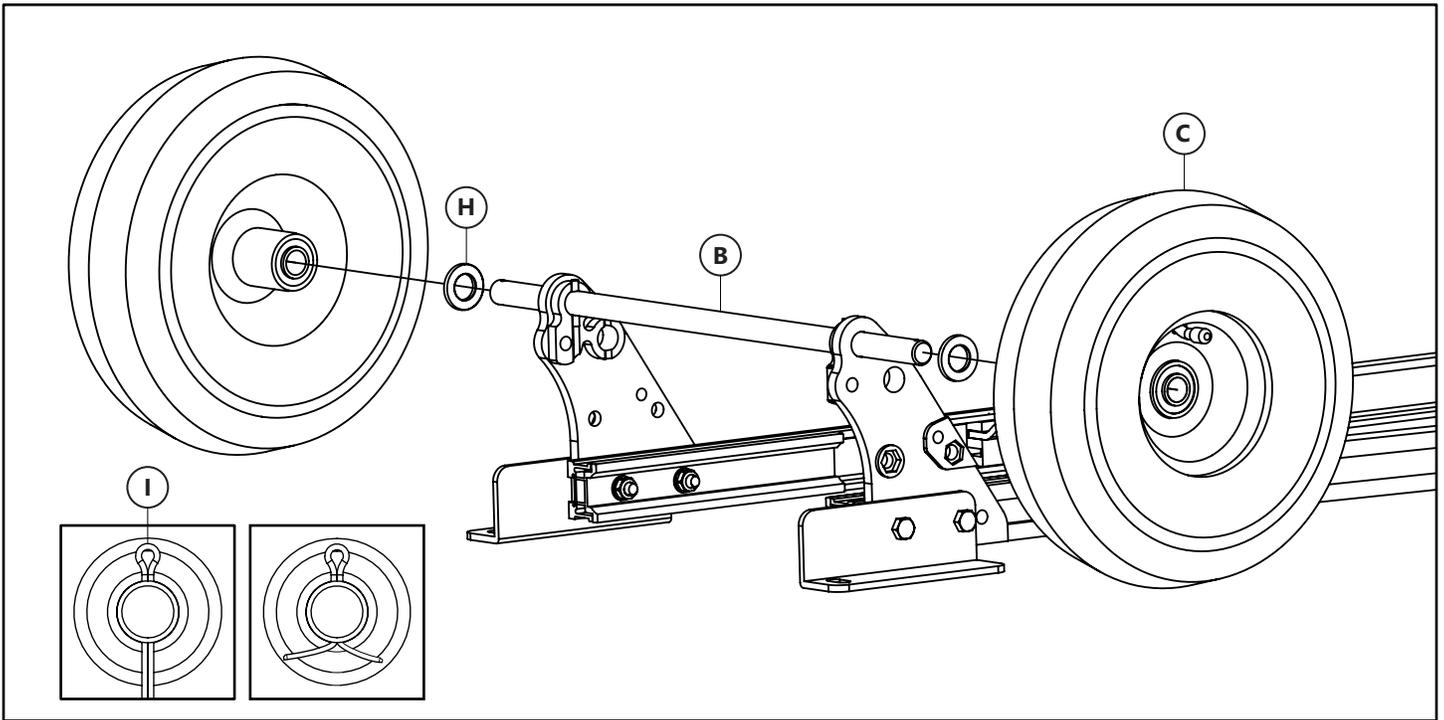

- Slide a large washer (H) and wheel (C) over each end the wheel axle (B).
- Insert a cotter pin (I) through hole at each end of the wheel axle (B). Use needle-nose pliers to bend cotter pins to locked position.

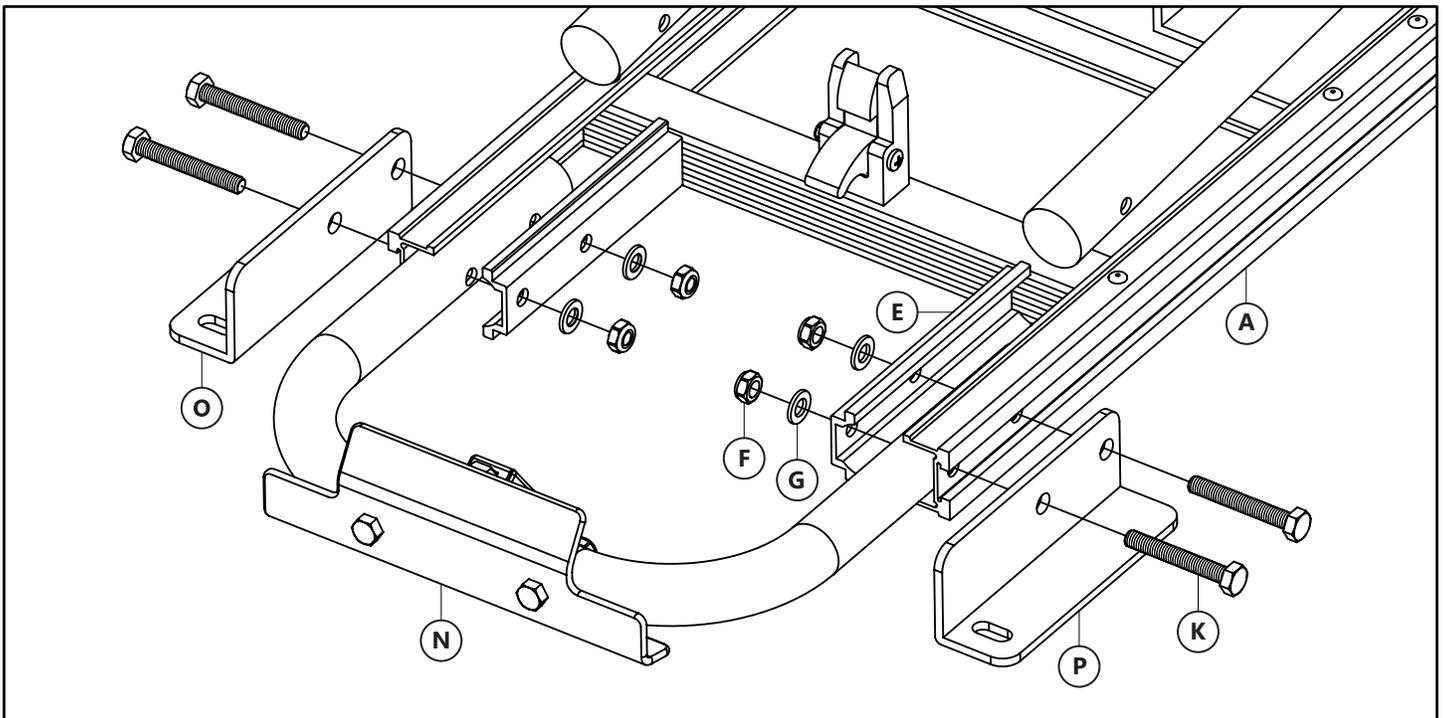

- Slide the handle assembly (N) into the handtruck assembly (A) extrusions. Align the handle and extrusion holes.
- Align the short U-bracket (E) and right L-bracket (P), with the holes in the handtruck assembly (A) extrusion.
- Attach using two long bolts (K), two small washers (G), and two locknuts (F). Tighten using 13mm ratchet and wrench.
- Repeat on the other side with the left L-bracket (O).

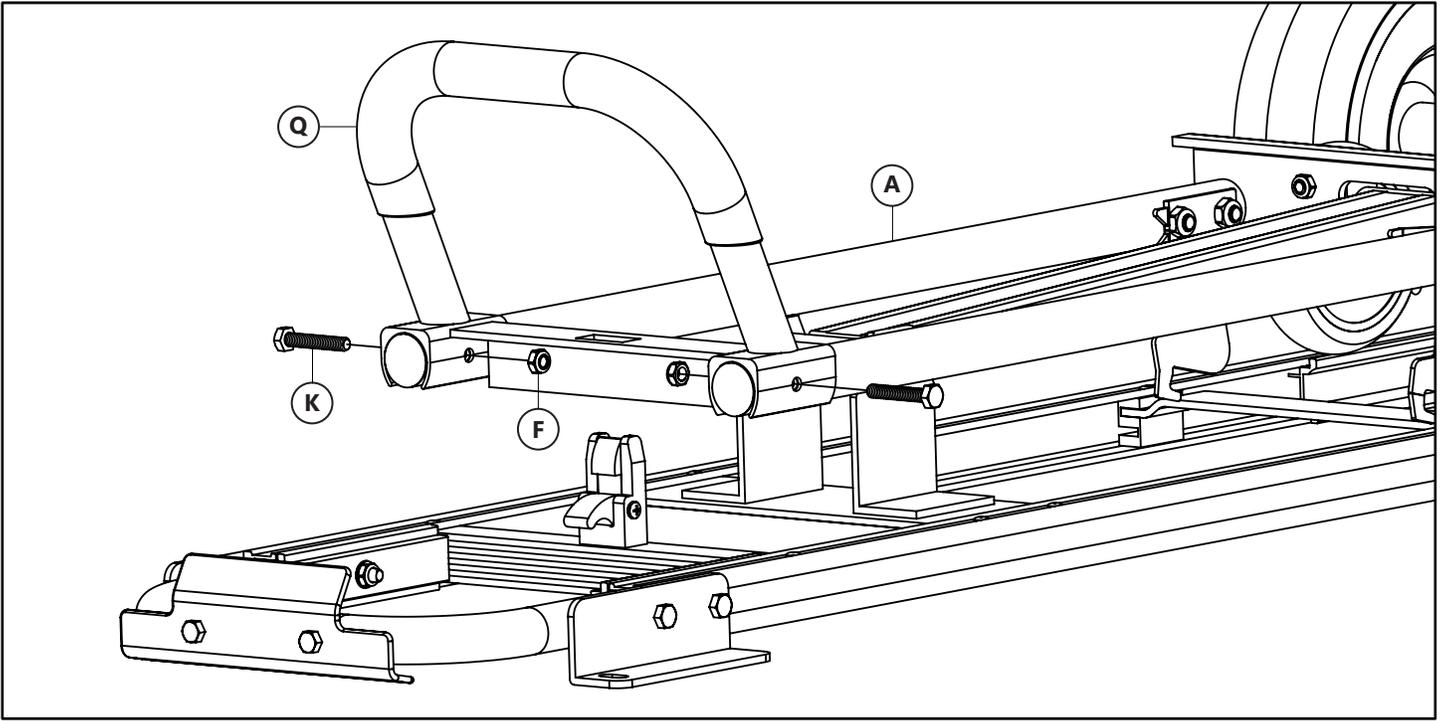

- Slide the cushioned handle (Q) onto the handtruck assembly (A) tubes. Align the handle and tube holes.
- Attach using two long bolts (K) and two locknuts (F). Tighten using 13mm ratchet and wrench.

