
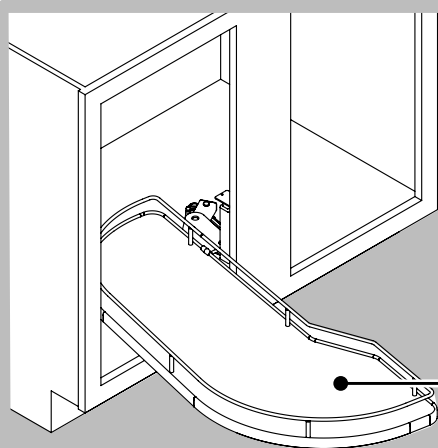
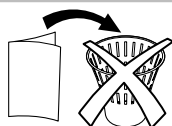
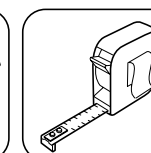
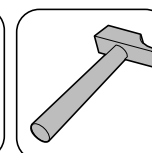
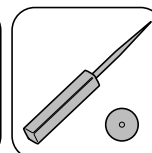
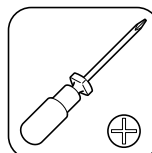
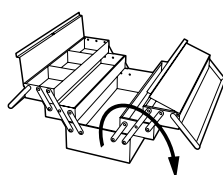
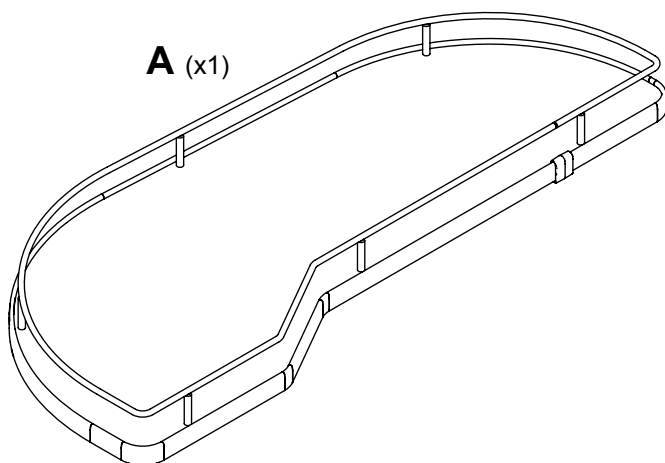
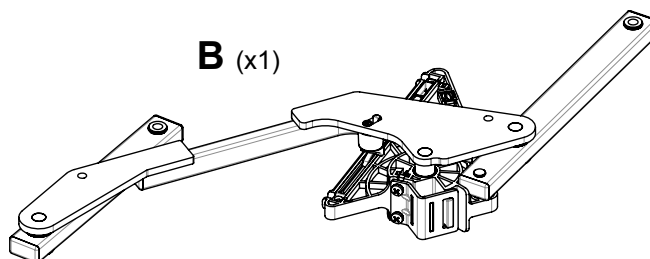
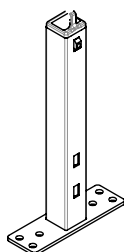
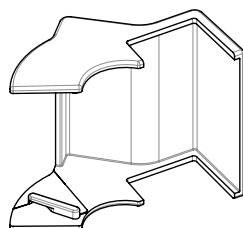
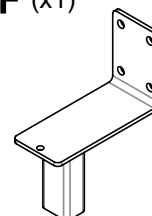





**33
lbs
MAX**


A3OISTR1315 05/2025

**x1****A (x1)****B (x1)****C (x1)****E (x1)****F (x1)****4.8x9.5****H (x1)****4x16****I (x8)****J (x2)**

1

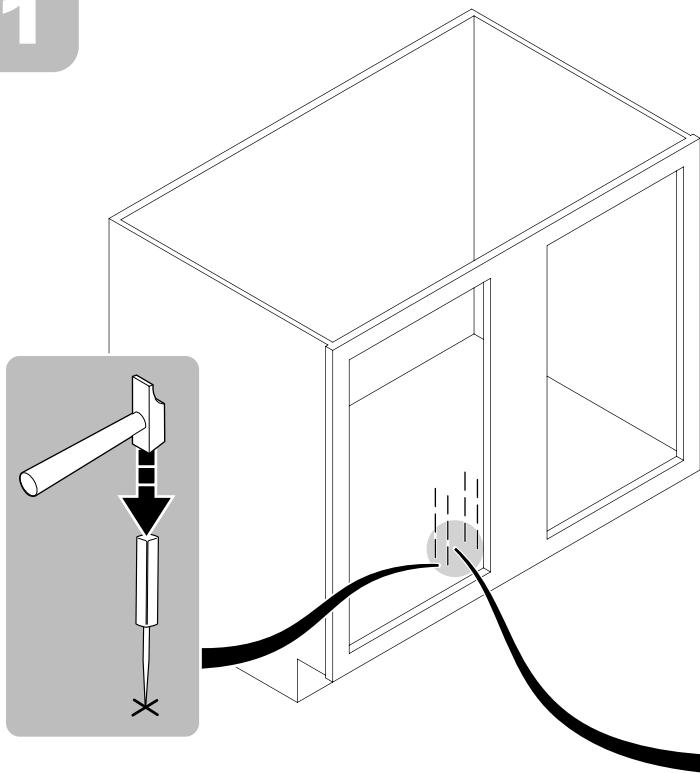

BOTTOM BRACKET TEMPLATE



LINEUP THE LINE THAT MATCHES YOUR UNIT AND CABINET WITH THE INSIDE CABINET OPENING

12" UNIT IN
BLIND LEFT
DOOR CABINET

15" UNIT IN
BLIND RIGHT/LEFT
DOOR CABINET

18" UNIT IN
BLIND RIGHT/LEFT
DOOR CABINET

ALIGN EDGE WITH
BACK OF STILE



18" UNIT IN
BLIND LEFT/RIGHT
DOOR CABINET

15" UNIT IN
BLIND LEFT/RIGHT
DOOR CABINET








12" UNIT IN
BLIND LEFT/RIGHT
DOOR CABINET

***Frameless and Inset Door applications use the FRAMELESS TEMPLATE to ensure clearance of hinge/door.**



2

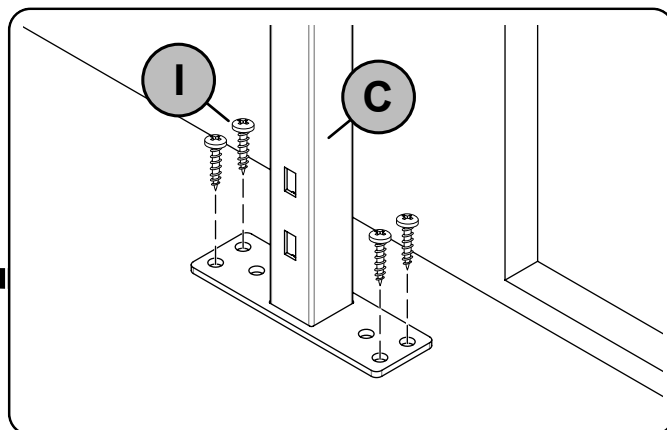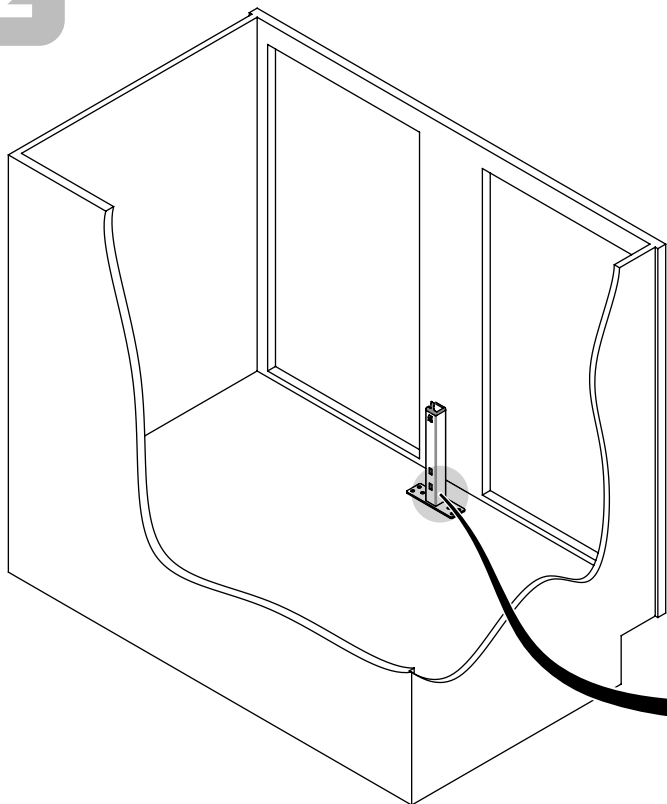


3

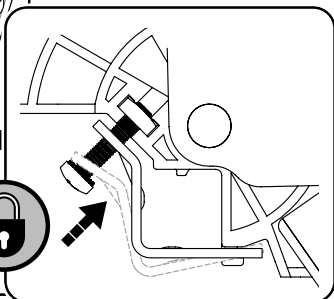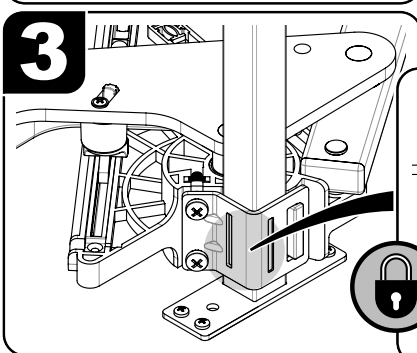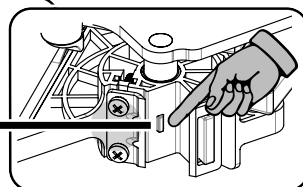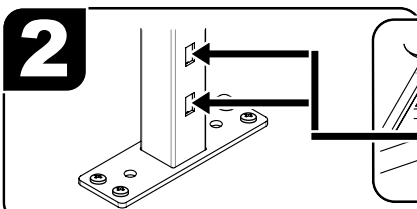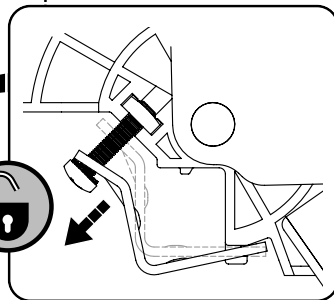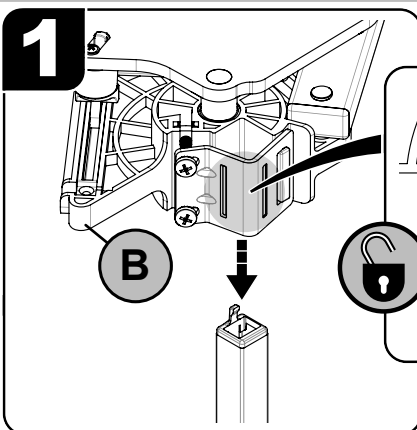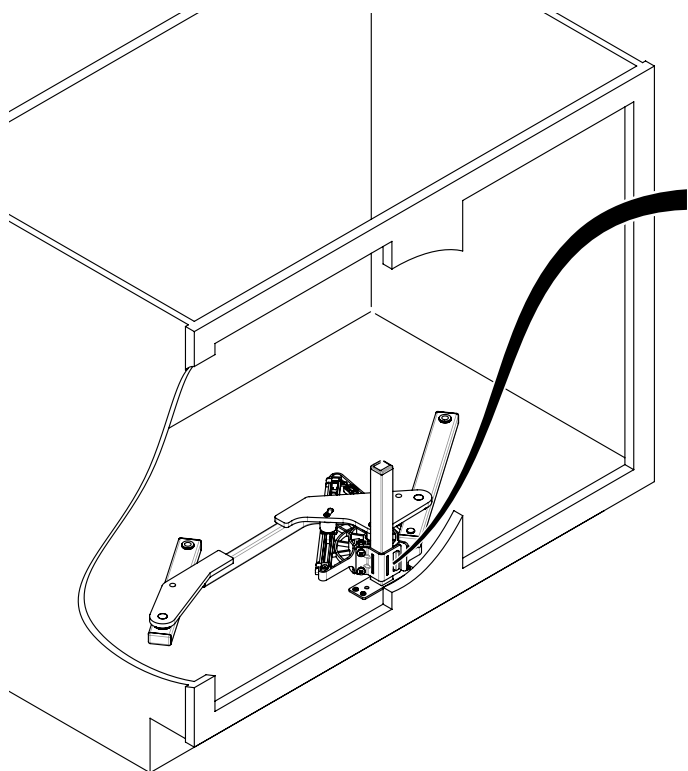


4

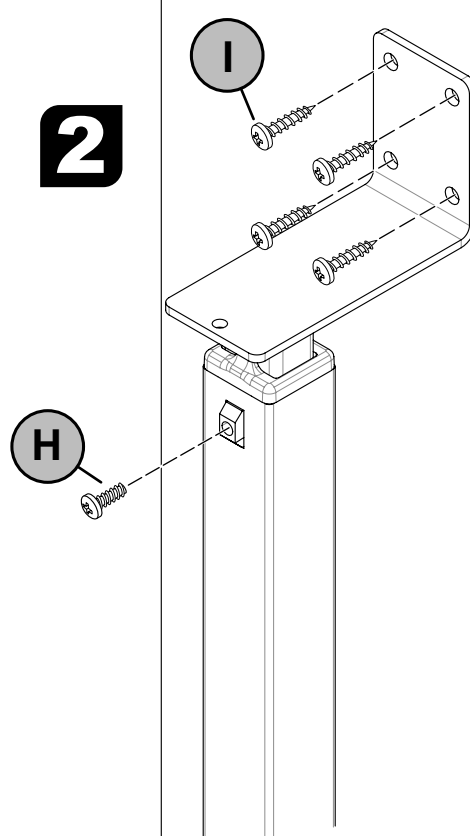
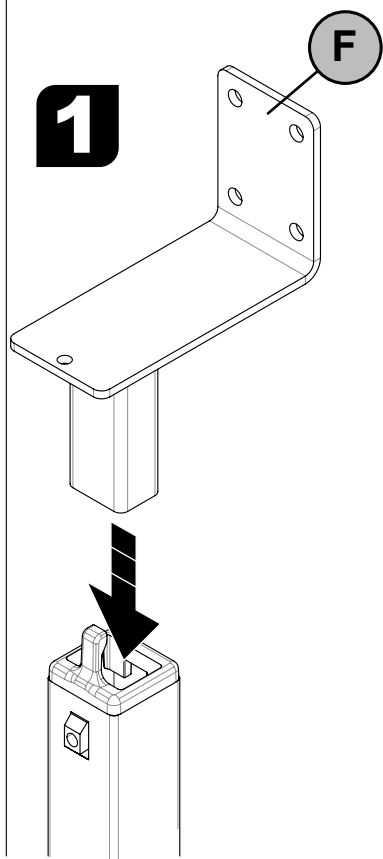


6

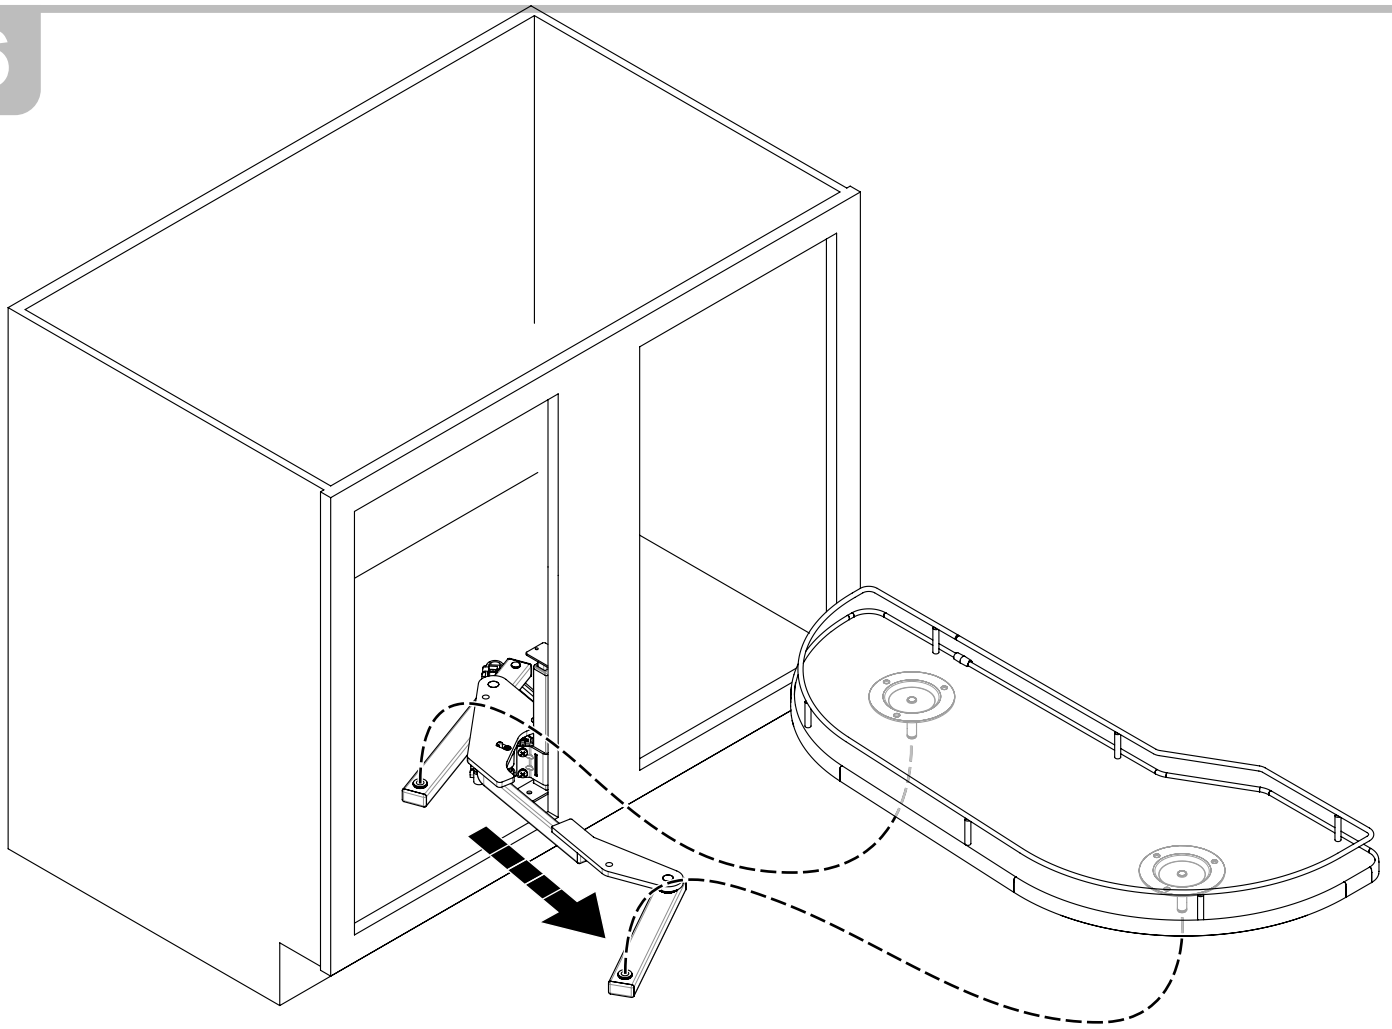

7

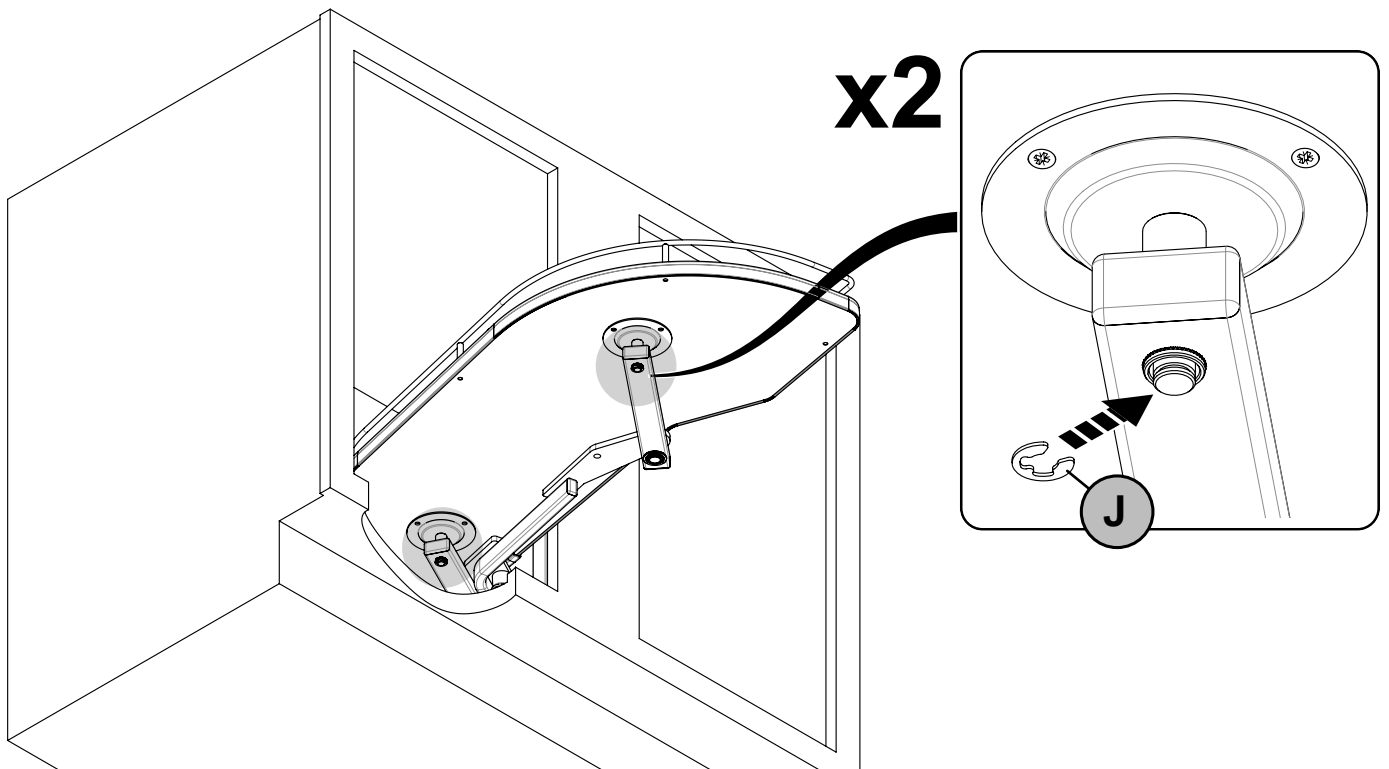

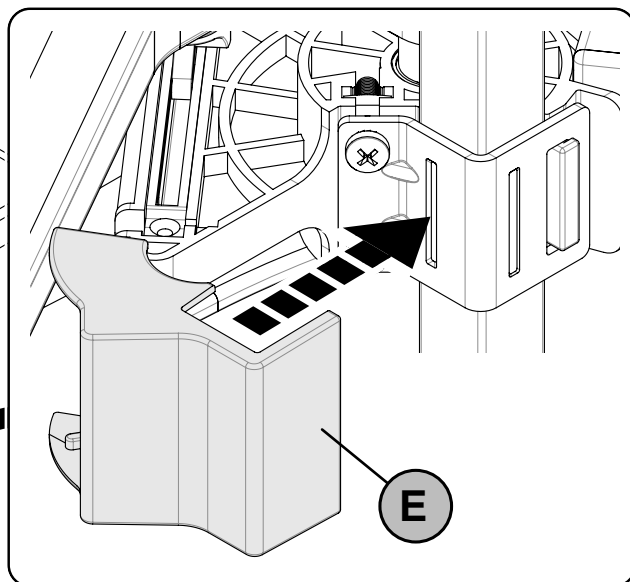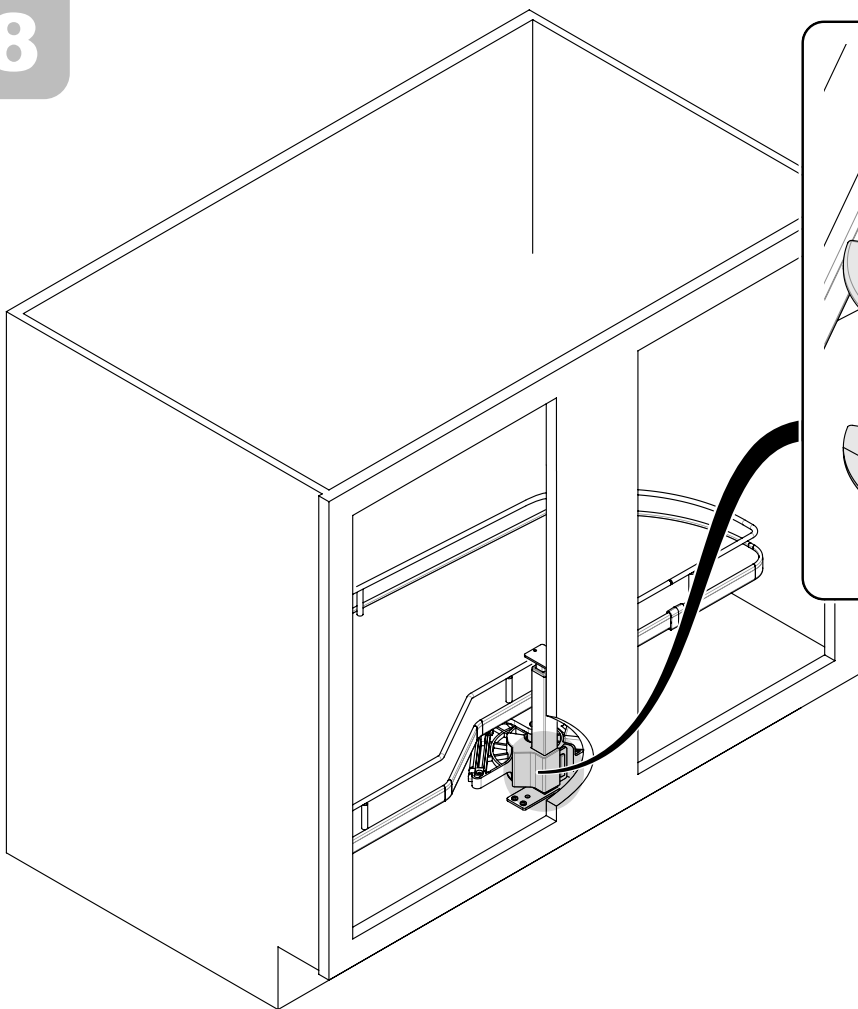

Blank lined paper for writing.

[illegible]

[illegible]