


REV-A-TRAYS

INSTALLATION INSTRUCTIONS

6621 SERIES - *Full Round*
6221 SERIES - *"D" Shape Pantry*
6421 SERIES - *Kidney*

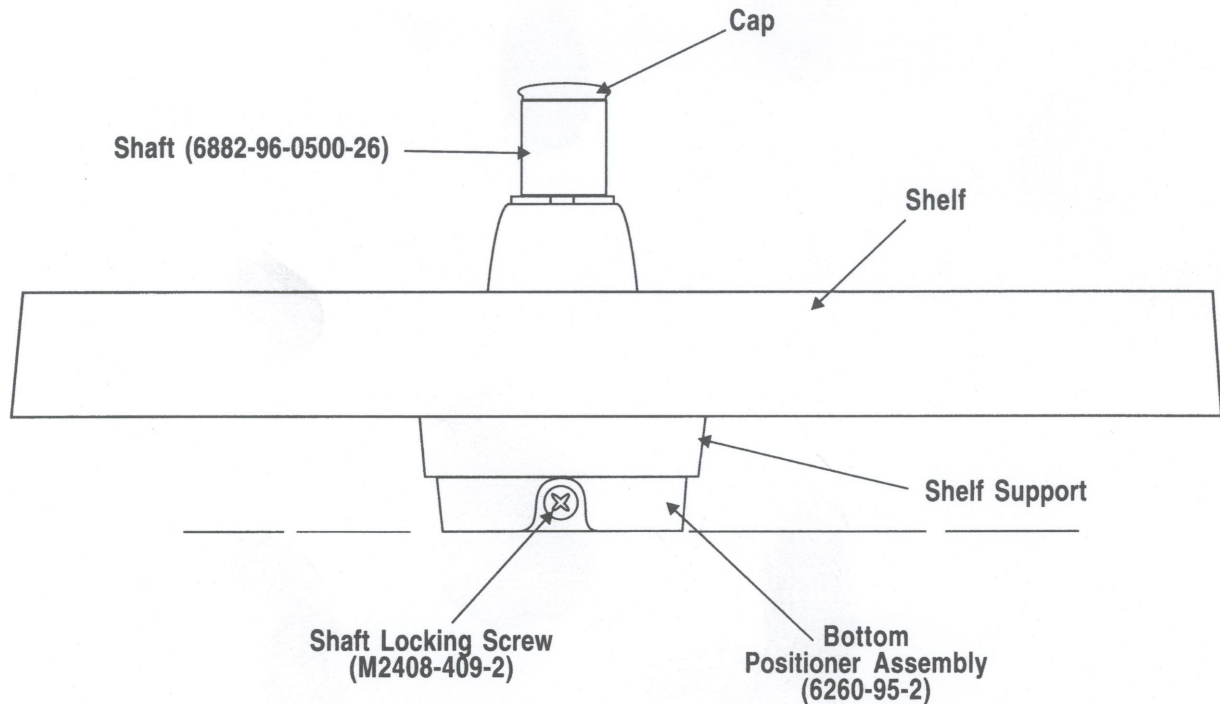

1. Locate the bottom positioner assembly on the cabinet floor so that the shelf will have at least 3/8" side clearance all around, and the position and location of the positioner base will determine the positioning of the shelf on pantry and kidney trays.
2. Pilot drill (1/8" diameter) holes and fasten the positioner assembly with four (4) 3/4" x 8 oval head wood screws (F1208-13-2).
3. Insert the shaft into the positioner assembly and tighten the locking screw. Place the shelf into the shaft.



12400 Earl Jones Way • Louisville, KY 40299
(800) 626-1126 • rev-a-shelf.com