




## **Front locking devices**

## Front locking devices - Standard mount - Side and depth adjustments

### For all Progressa, Progressa+ and Progressa+ Shelf slides

- Dual steel/fiber glass-nylon construction
- Compatible with all Progressa slides
- Tool free lateral and depth adjustments
- Pre-drilling recommended  $\varnothing$  2.5 mm (3/32")

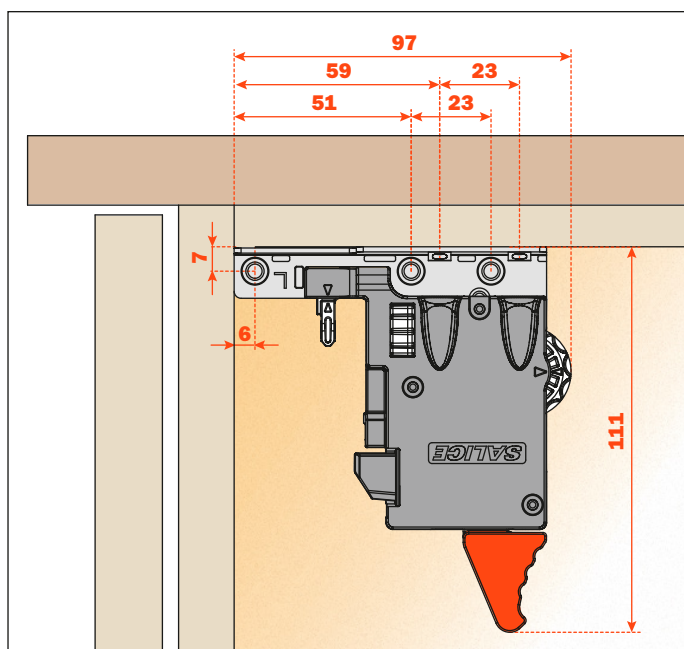


#### AFCGXX3B


##### PACKAGING

2 boxes = 100 pcs right and 100 pcs left

### Assembly to the bottom

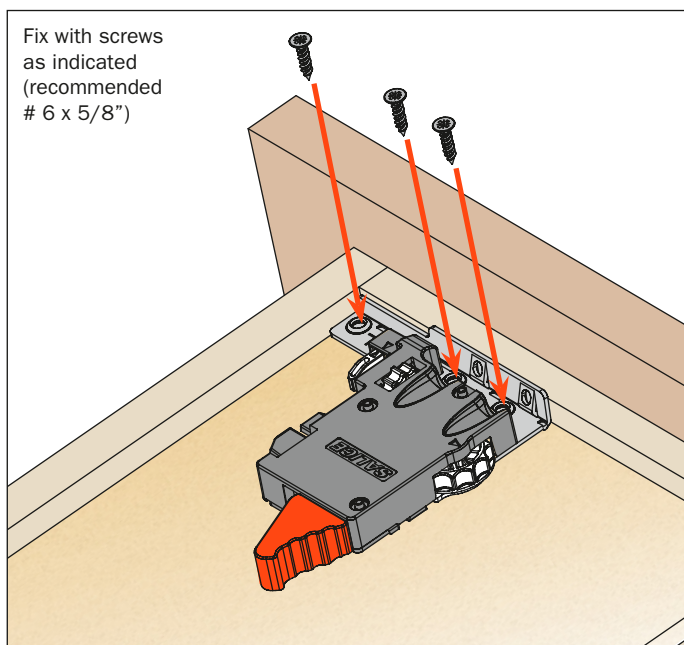

### Assembly to the drawer

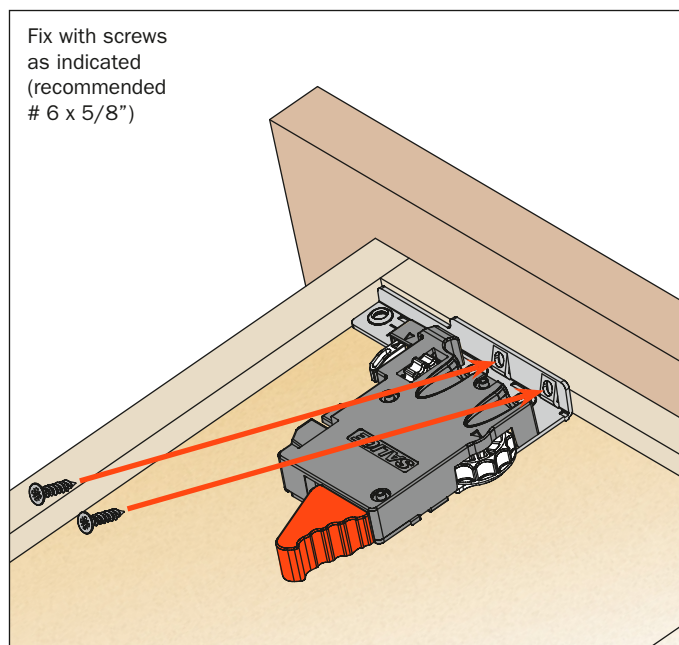


Use **drilling templates** for accurate installation of the clips, see page 62.

## Front locking devices - Vertical mount - Side and depth adjustments

### For all Progressa and Progressa+ slides

- Dual steel/fiber glass-nylon construction
- Compatible with all Progressa slides
- Tool free lateral and depth adjustments
- Height of the sub front must be 13 mm (1/2")
- Pre-drilling recommended  $\varnothing$  2.5 mm (3/32")

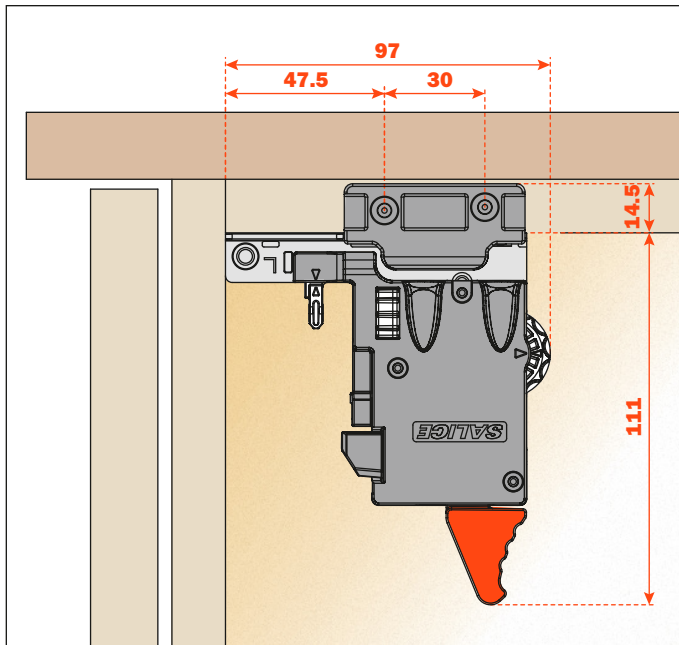


#### AFCGX43B


##### PACKAGING

2 boxes = 100 pcs right and 100 pcs left

### Assembly to the drawer top side

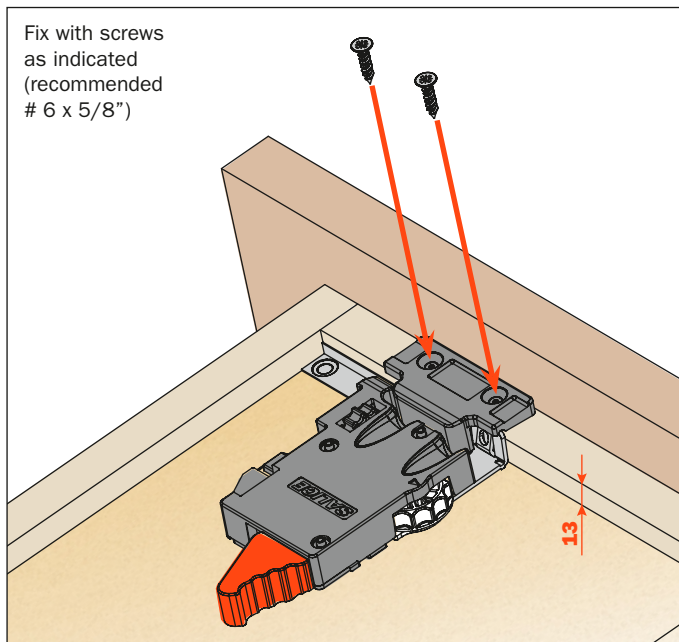

Use **drilling templates** for accurate installation of the clips, see page 62.

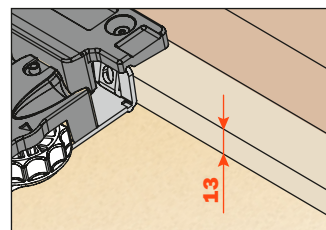


Height of the sub front must be 13 mm (1/2").

## Front locking devices - Standard mount - Front and side fixing

### For all Progressa, Progressa+ and Progressa+ Shelf slides

- Engineered thermoplastics
- Compatible with all Progressa slides
- Side fixing option
- Pre-drilling recommended  $\varnothing$  2.5 mm (3/32")
- Minimum inside drawer width 5-1/8"
- Minimum inside cabinet width 6-3/4"

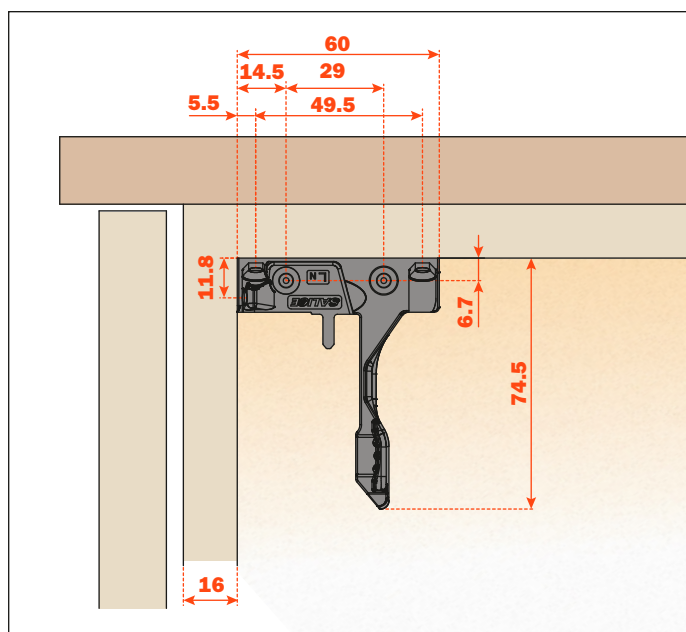


#### AFCEX56B


##### PACKAGING

2 boxes = 100 pcs right and 100 pcs left

### Assembly to the bottom

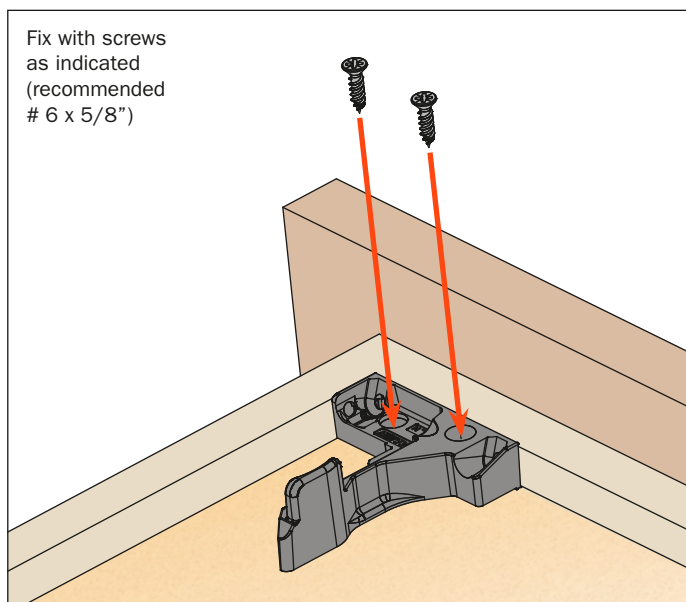

### Assembly to the drawer

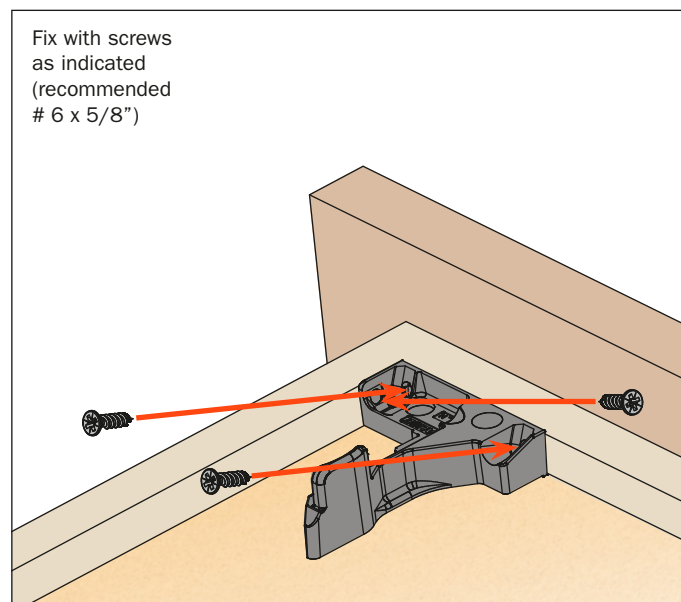


Use **drilling template** for accurate installation of the clips, see page 65.

## Front locking devices - Narrow drawer clip

### For all Progressa and Progressa+ slides

- Engineered thermoplastics
- For use with narrow drawers
- Compatible with all Progressa slides
- Height of the sub front must be 13 mm (1/2")

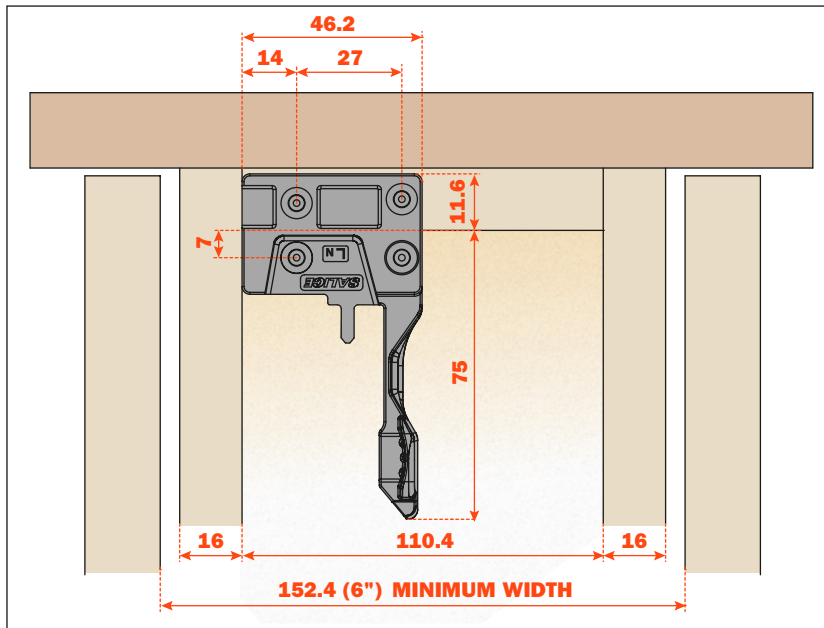


### AFCEX43B

#### PACKAGING


2 boxes = 100 pcs right and 100 pcs left

### Assembly to the bottom

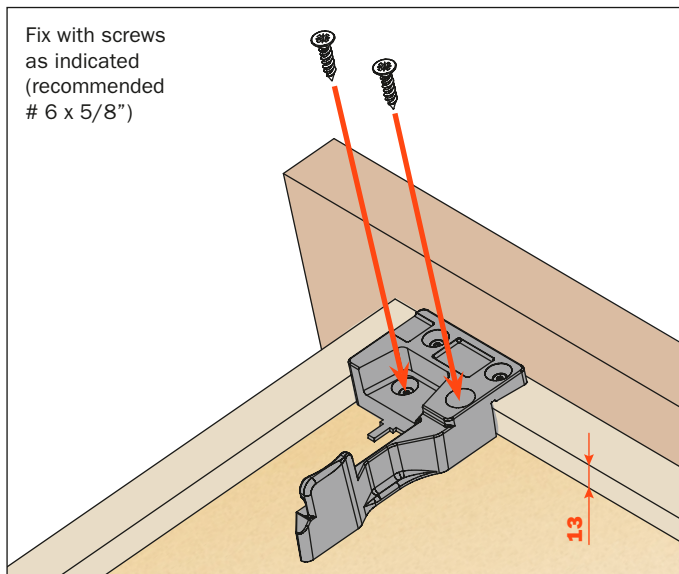


Use **drilling template** for accurate installation of the clips, see page 62.

### Assembly to the drawer top side

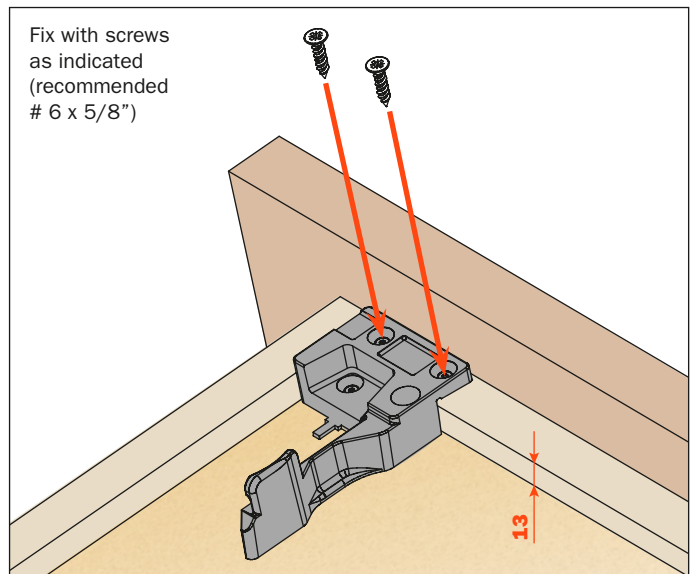

Use **drilling template** for accurate installation of the clips, see page 62.

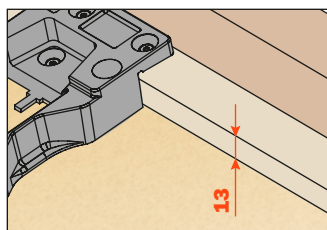

Height of the sub front must be 13 mm (1/2").




## Drawer removal

### Standard and vertical mount - 6-way adjustable - Side and depth adjustments

#### For all Progressa, Progressa+ and Progressa+ Shelf slides


Position hands under the front of the drawer and press on the orange levers, as indicated in the drawing, sliding the drawer out of the cabinet.

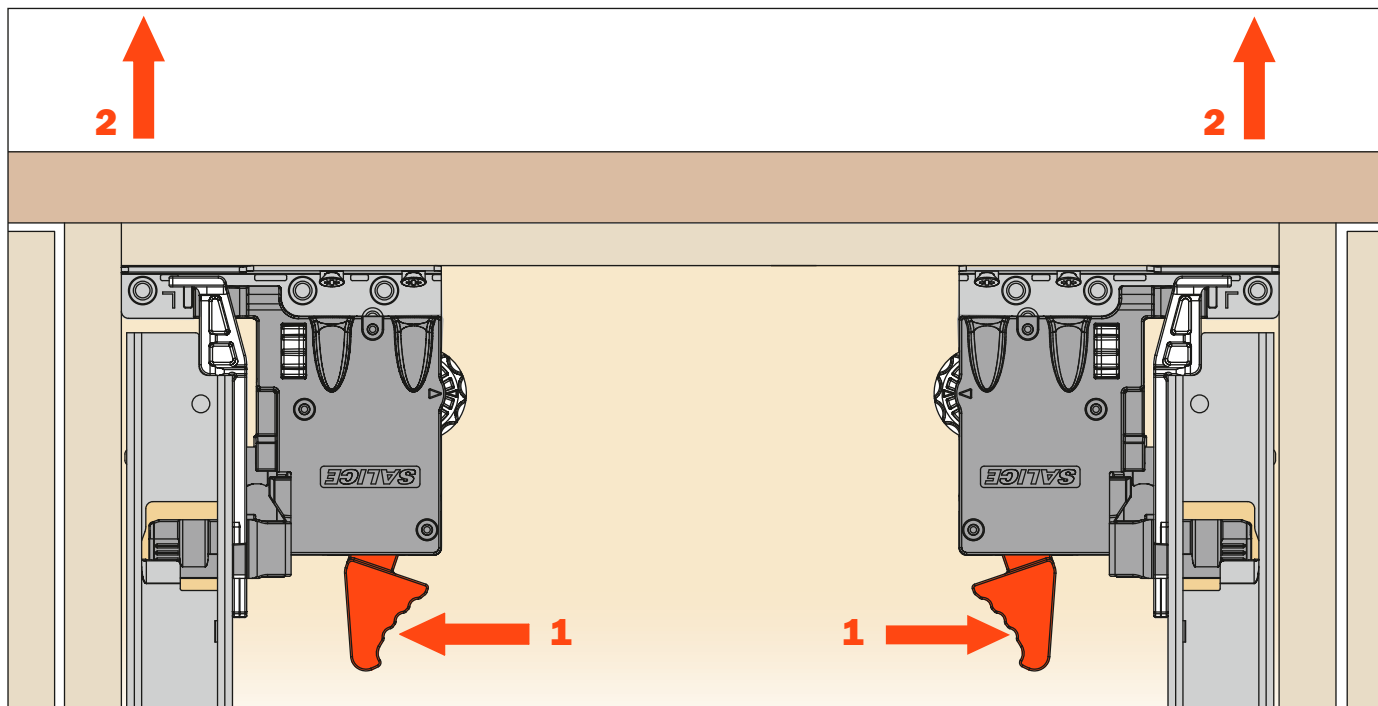

### Standard mount - 2-way adjustable - Front and side fixing

#### For all Progressa, Progressa+ and Progressa+ Shelf slides

Position hands under the front of the drawer and press on the black levers, as indicated in the drawing, sliding the drawer out of the cabinet.

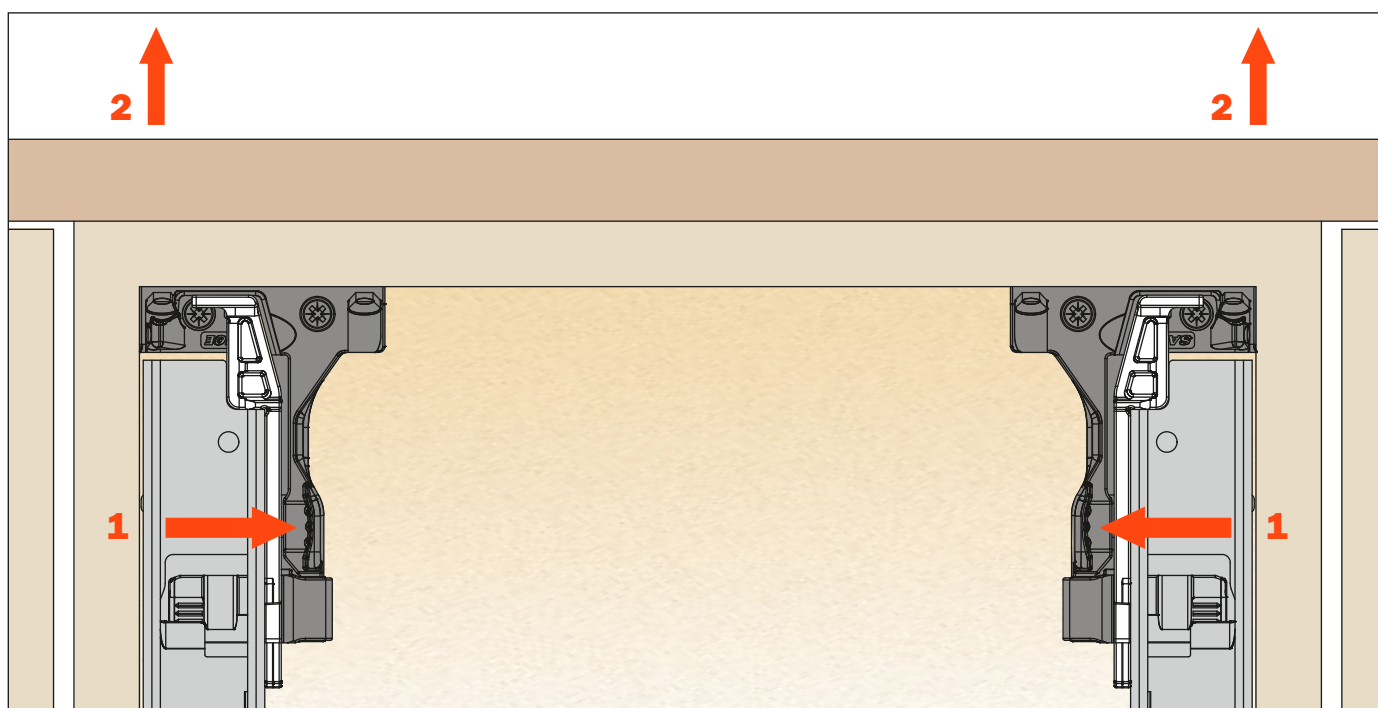

## Narrow drawer clip

### For all Progressa and Progressa+ slides

Position hands under the front of the drawer and press on the black levers, as indicated in the drawing, sliding the drawer out of the cabinet.

