

# **VS TAL® Pantry**








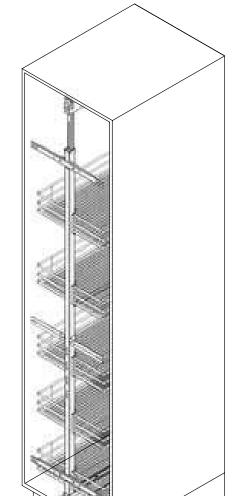


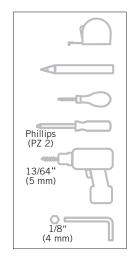

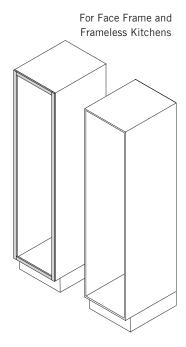




## **CABINET DIMENSIONS**

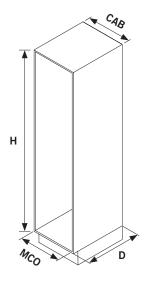


FF Cabinet widths (CAB)	FL Cabinet widths (CAB)	Cabinet opening (MCO)	Installation depth ( <b>D</b> )	Installation height 1 (H)	Installation height 2 ( <b>H</b> )	Installation height 3 (H)	Installation height 4 ( <b>H)</b>	Installation height 5 <b>(H)</b>
12"	min. 10.5"	9"	22.5"	37.5"	47.25"	57"	67"	76.75"
15"	min. 13.5"	12"	22.5"	37.5"	47.25"	57"	67"	76.75"
18"	min. 16.5"	15"	22.5"	37.5"	47.25"	57"	67"	76.75"
21"	min. 19.5"	18"	22.5"	37.5"	47.25"	57"	67"	76.75"
24"	min. 22.5"	21"	22.5"	37.5"	47.25"	57"	67"	76.75"



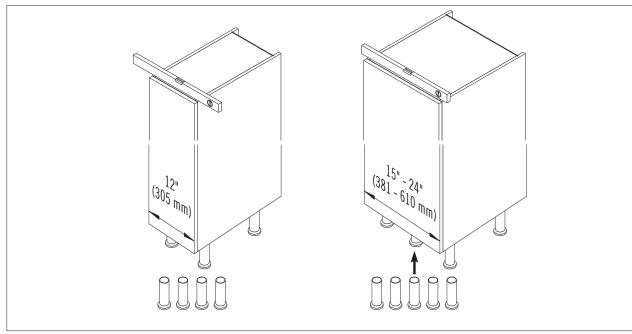




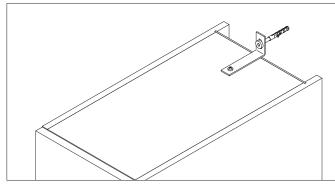

## **CAUTION:**


The cabinet must be securely fastened to the wall studs to prevent it from tipping over. Appropriate fastening material is not supplied with the set.


It is the responsibility of the installer to insure the unit is properly installed and securely fastened to wall studs.

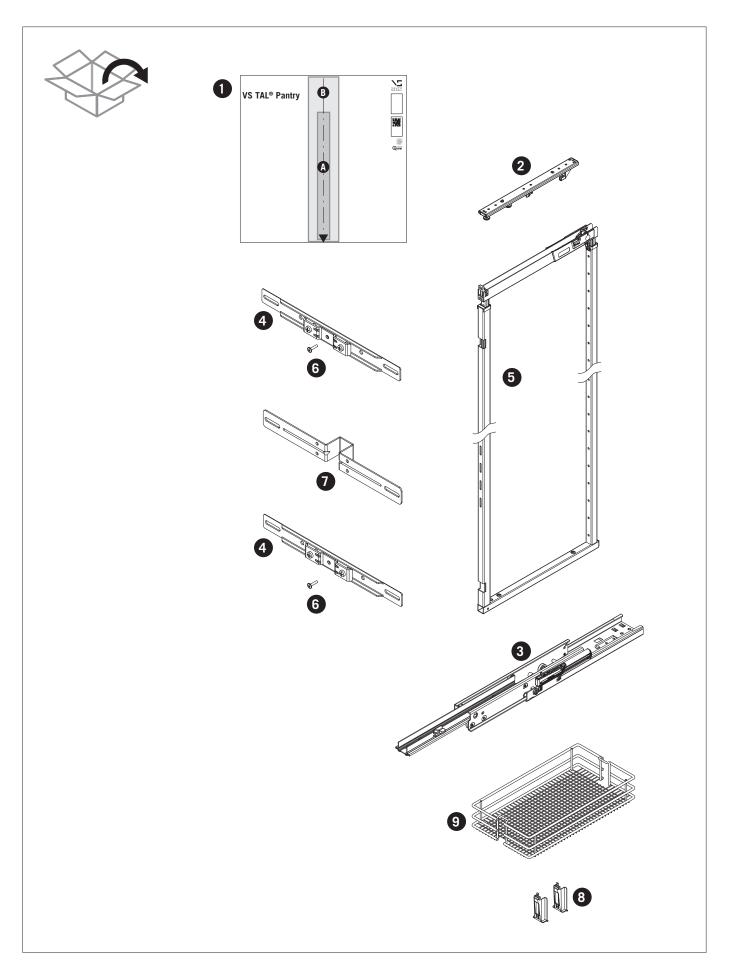







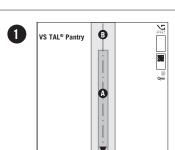




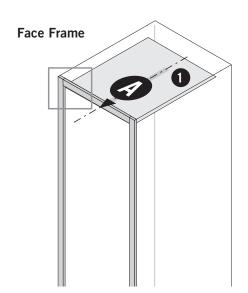

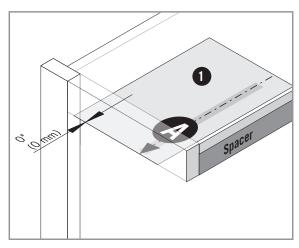


For faceframe installation a spacer needs to be installed at the cabinet ceiling so the installation level is flush with the face frame.

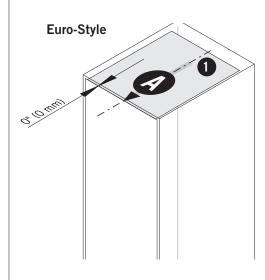



ø 1/5" (5 mm)




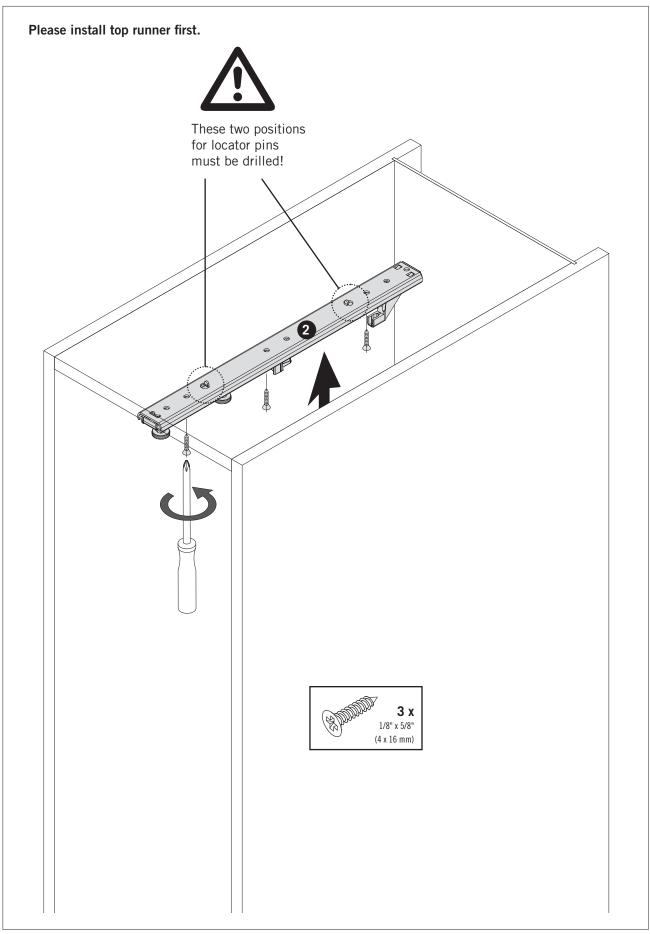










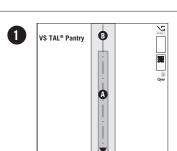




#### **Face Frame**

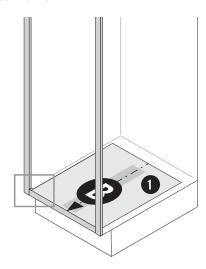

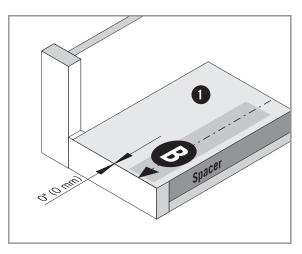


For faceframe installation a spacer needs to be installed at the cabinet floor so the installation level is flush with the face frame.

# **Frameless**

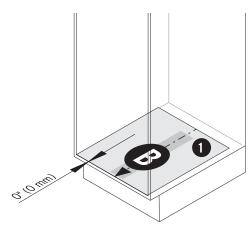




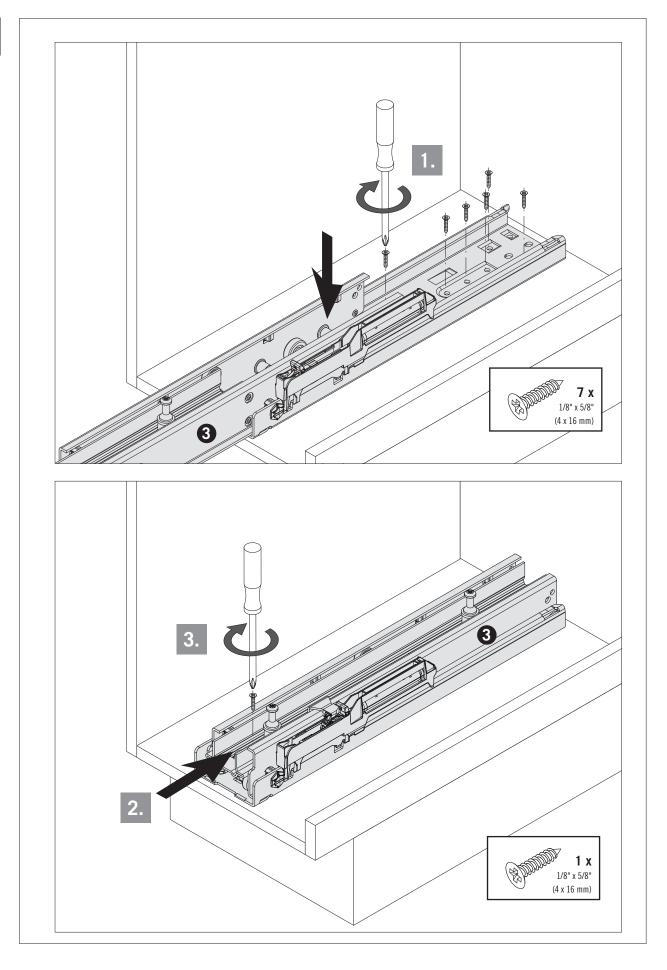








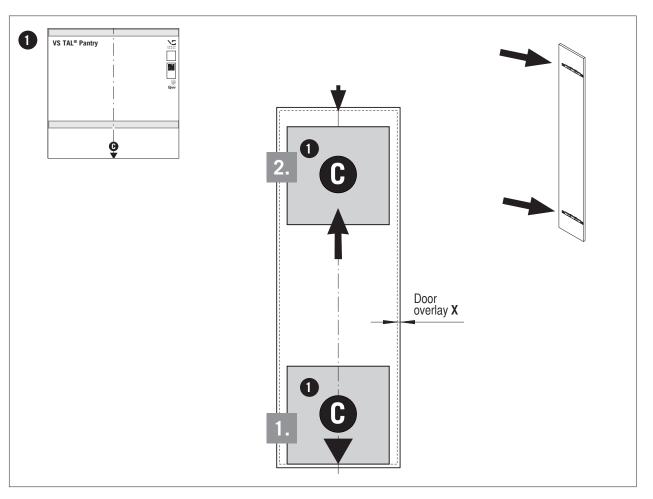



6



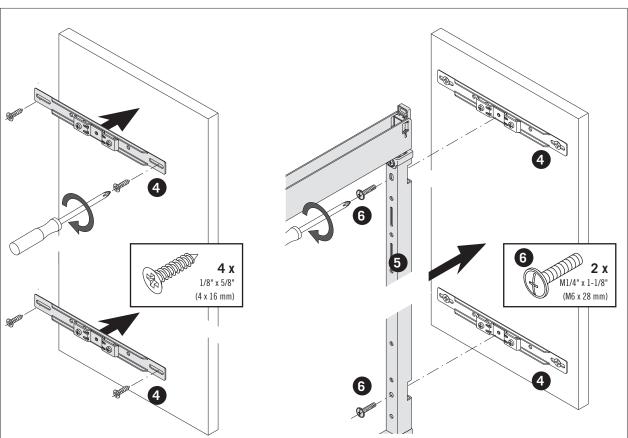





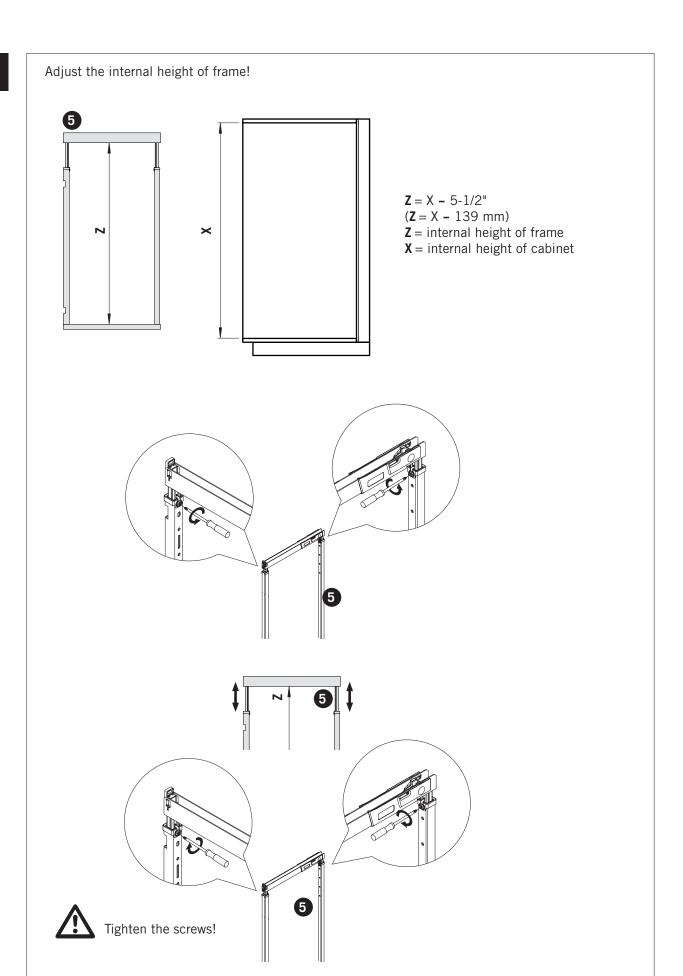

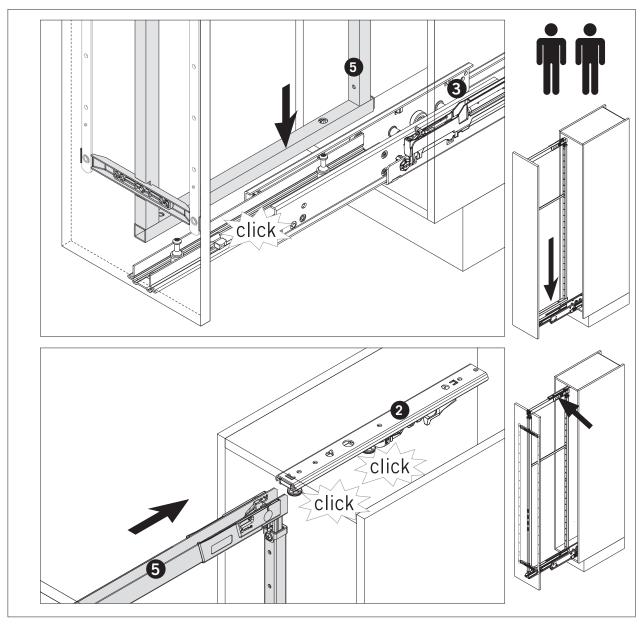





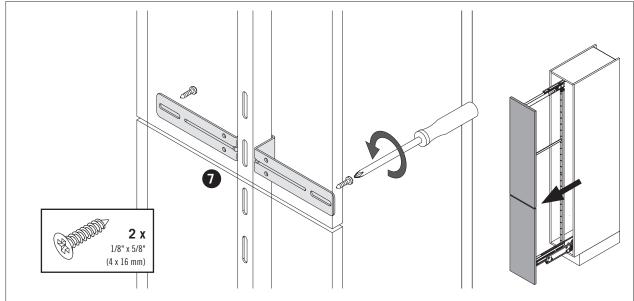


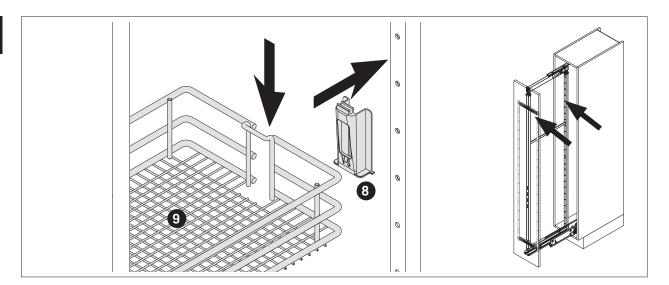





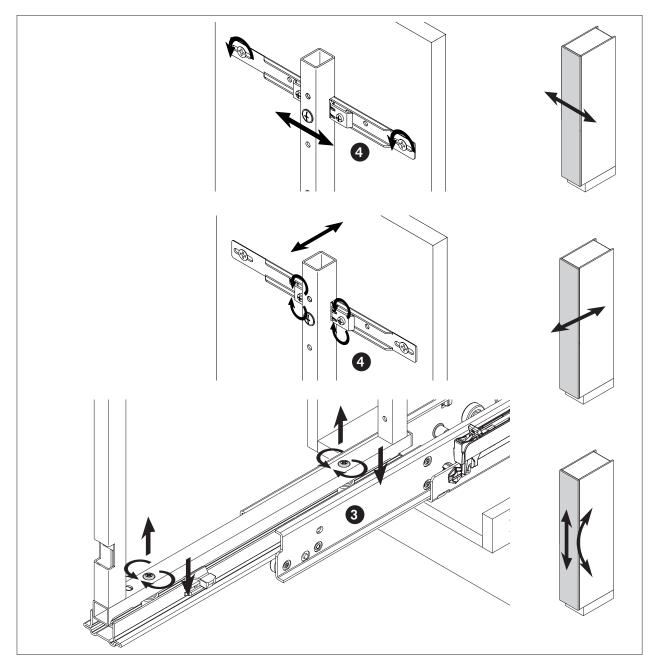


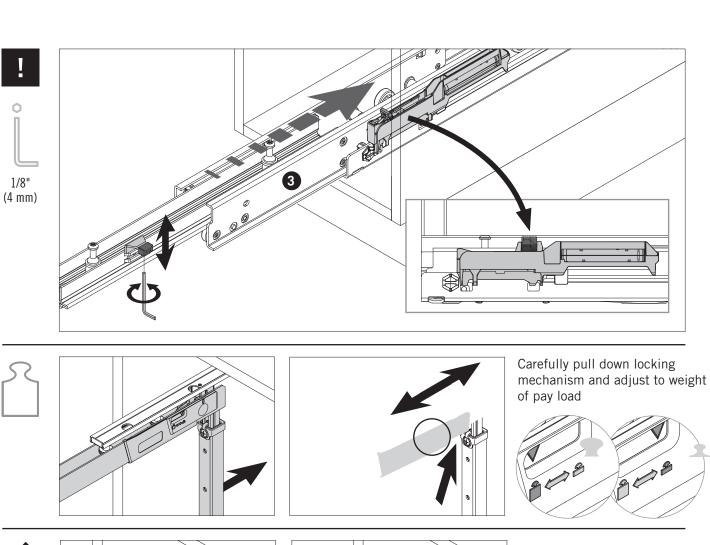

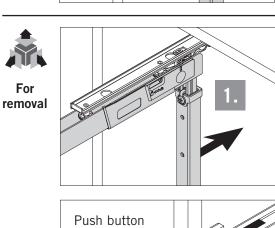

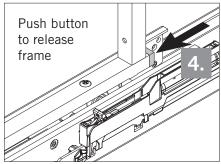

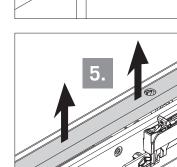

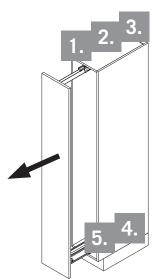

For reassembly follow from step 9

# Vauth-Sagel USA LP

Address 1821 Baker Road High Point, NC 27263 Phone +1 336 861 0740 Toll free +1 855 770 9121 Fax +1 336 861 0741 Email support@vauth-sagel-usa.com Web www.vauth-sagel-usa.com